


Fuse Positions , (L0L)

From January 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

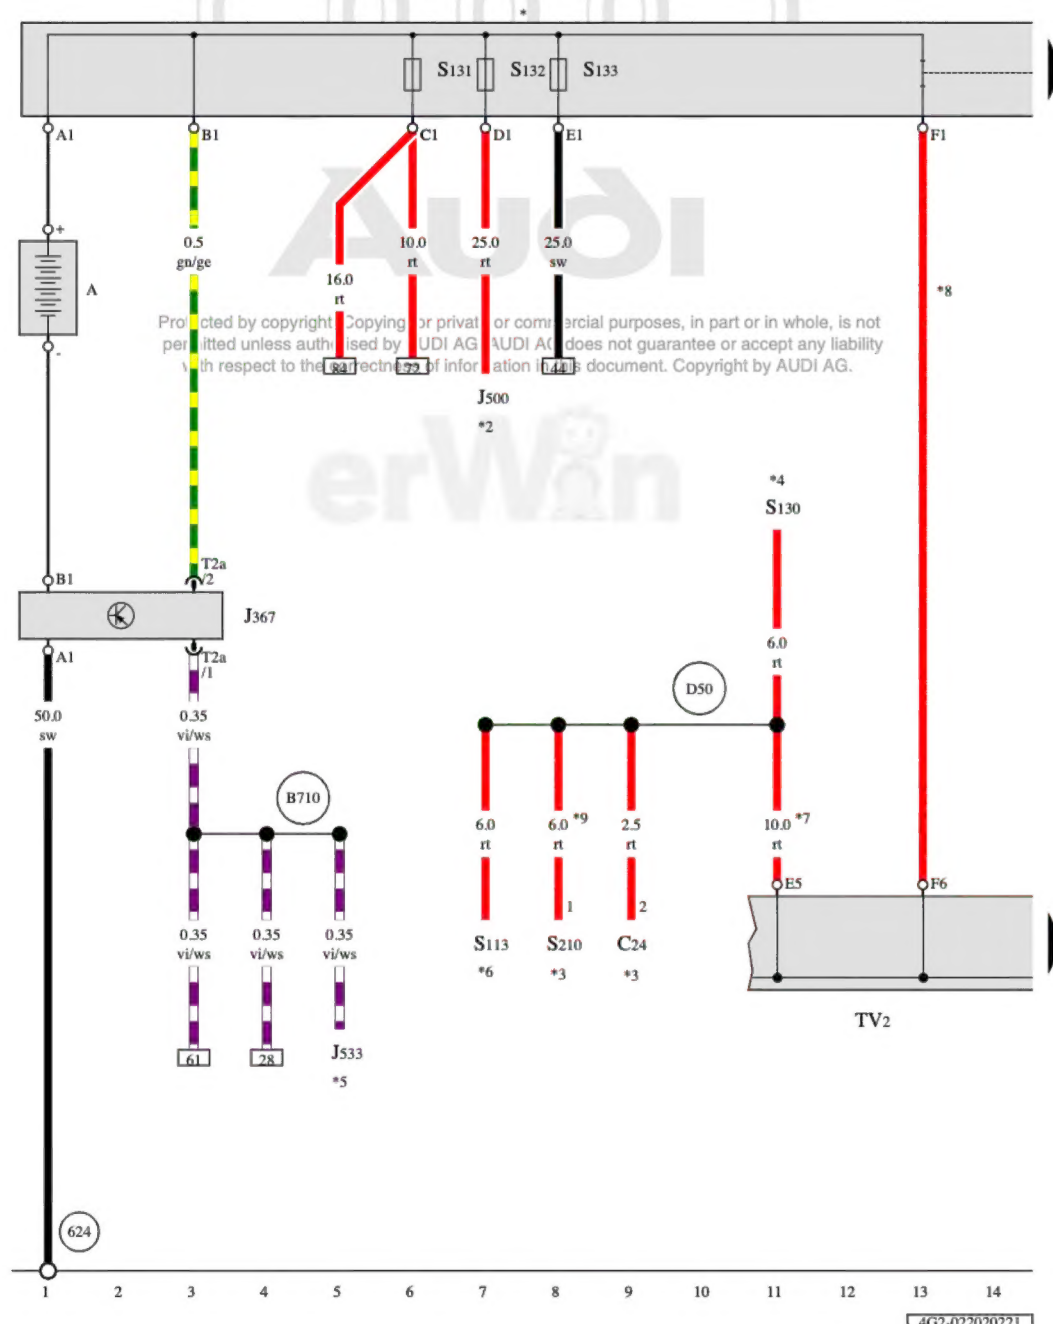

Battery, Battery Monitoring Control Module


- A Battery
- C24 Suppressor
- J367 Battery Monitoring Control Module
- J500 Power Steering Control Module
- J533 Data Bus on Board Diagnostic Interface
- S113 Automatic Transmission Control Module Fuse
- S130 Secondary Air Injection Pump Fuse
- S131 Safety Fuse 1
- S132 Safety Fuse 2
- S133 Safety Fuse 3
- S210 Fuse 7 (Terminal 30)
- T2a 2-Pin Connector
- TV2 Terminal 30 Wire Junction

624 Ground Connection near Starter Battery

B710 LIN Bus Connection 5 (in Main Wiring Harness)

D50 Positive Connection (30) (in Engine/Motor Compartment Wiring Harness)

- * Main Fuse Carrier in the Right Rear Luggage Compartment, at the Battery
- *2 Refer to Applicable Standard Equipment Wiring Diagram
- *3 Refer to Applicable Engine Wiring Diagram
- *4 For Vehicles with Secondary Air Injection Pump
- *5 Refer to Applicable Wiring Diagram for Data Bus Networking
- *6 Refer to Applicable Wiring Diagram for Automatic Transmission (DSG)
- *7 Diameter Depends on Equipment
- *8 Flat Conductor
- *9 For Vehicles with Hybrid Drive

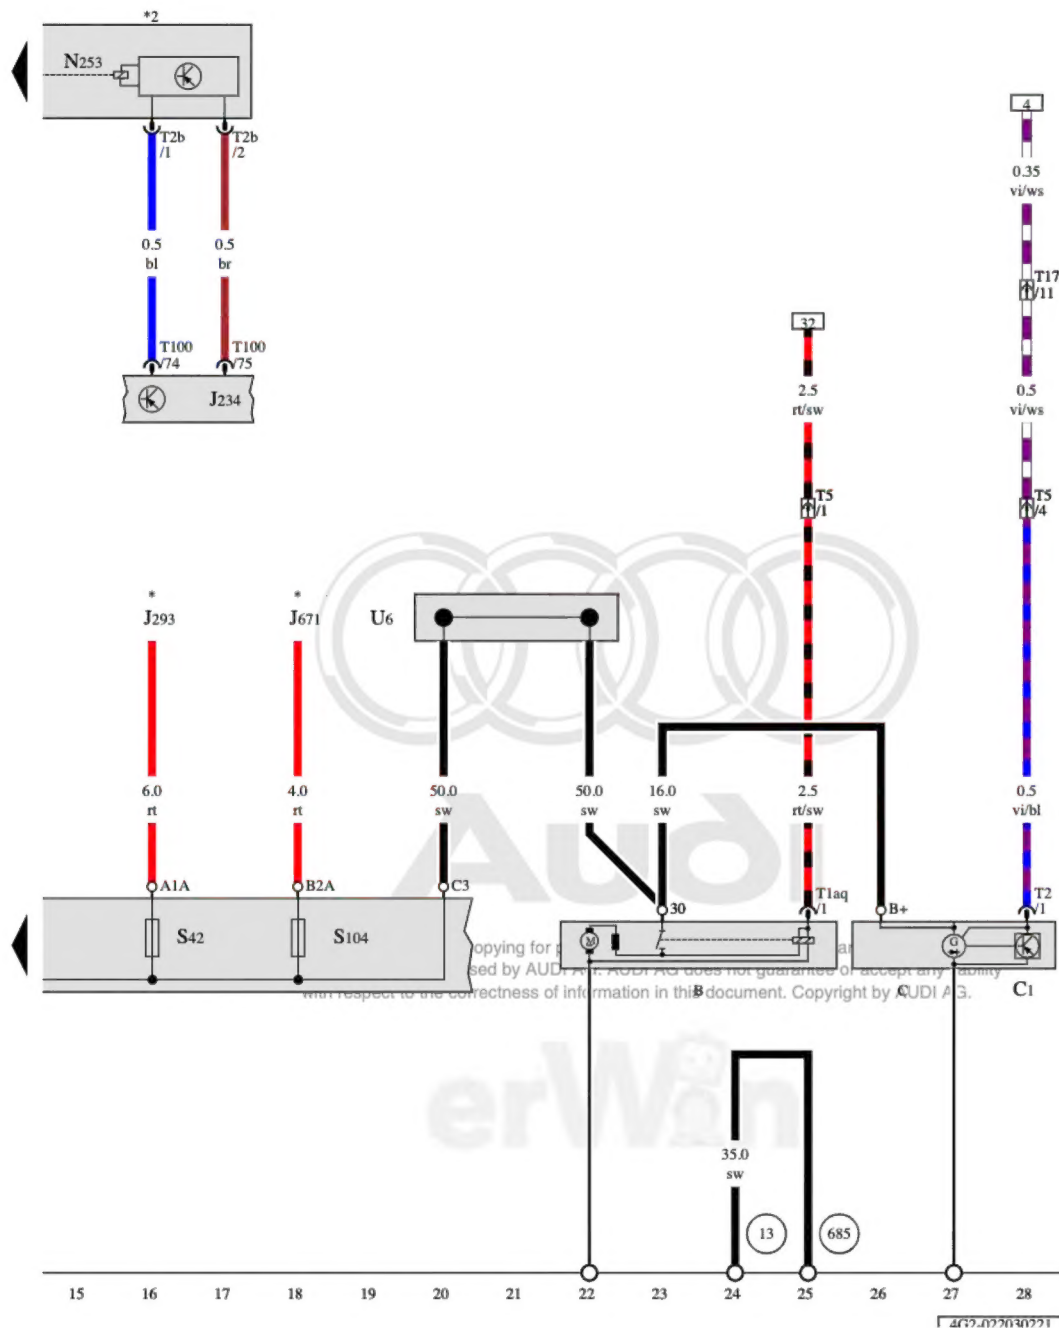


Starter, Generator, Battery Interrupt Igniter, Battery Jump Start Terminal

- B Starter
- C Generator
- C1 Voltage Regulator
- J234 Airbag Control Module
- J293 Radiator Fan Control Module
- J671 Radiator Fan Control Module 2
- N253 Battery Interrupt Igniter
- S42 Radiator Fan Fuse
- S104 Radiator Fan Second Speed Fuse
- T1aq 1-Pin Connector
- T2 2-Pin Connector
- T2b 2-Pin Connector
- T5 5-Pin Connector, In the Center Plenum Chamber
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T100 100-Pin Connector
- U6 Battery Jump Start Terminal
- 13 Ground Connection in Engine/Motor Compartment, Right
- 685 Ground Connection 1 on Right Front Longitudinal Member
- * Refer to Applicable Engine Wiring Diagram
- *2 Main Fuse Carrier in the Right Rear Luggage Compartment, at the Battery

J53 Starter Relay
J623 Engine/Motor Control Module
J695 Starter Relay 2


- D35 Positive Connection 1 (15a) (in Engine Pre-Wiring Harness)
- D210 Connection 50 (in Engine/Motor Compartment Wiring Harness)
- * Refer to Applicable Engine Wiring Diagram

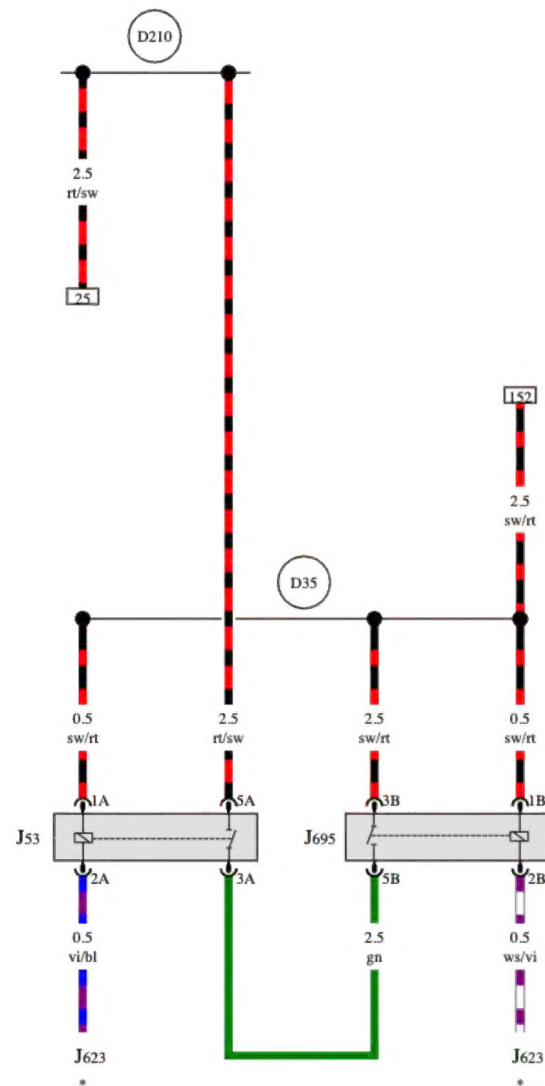

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Copyright © 2012 by The McGraw-Hill Companies, Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without prior written permission from The McGraw-Hill Companies, Inc.

ws	=	white
sw	=	black
ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
vi	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

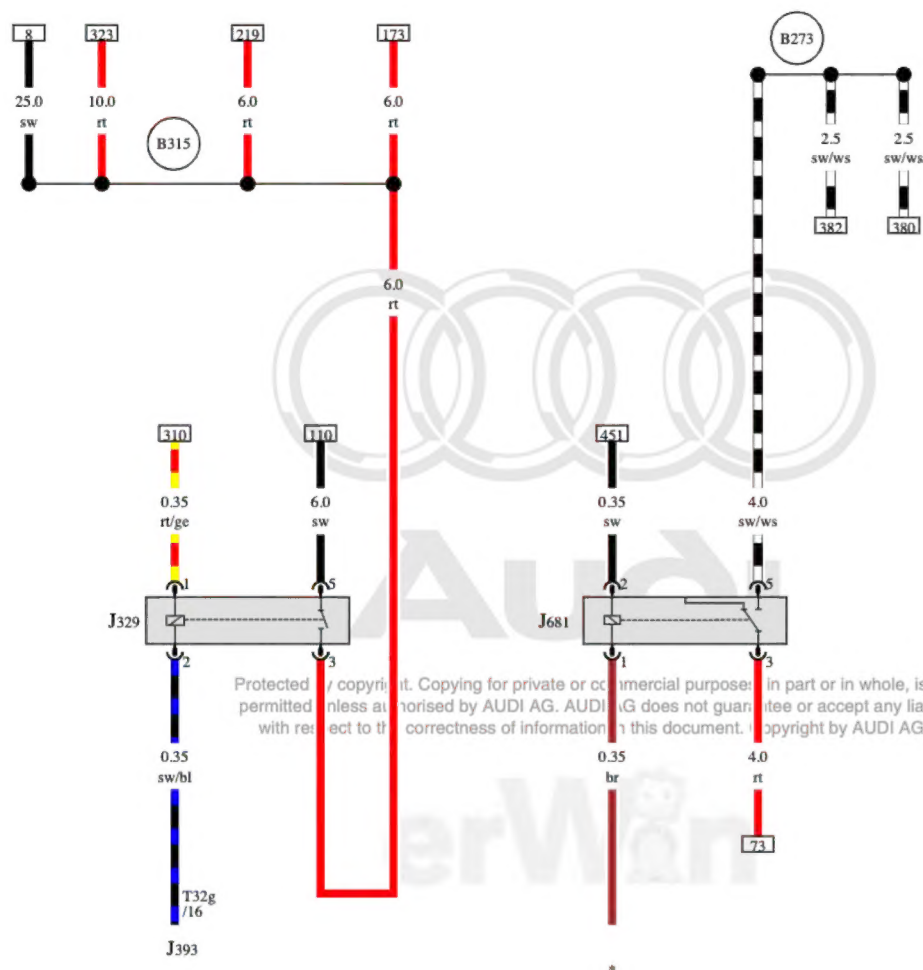

Terminal 15 Power Supply Relay, Terminal 15 Power Supply Relay 2

J329 Terminal 15 Power Supply Relay
J393 Comfort System Central Control Module
J681 Terminal 15 Power Supply Relay 2
T32g 32-Pin Connector

B273 Positive Connection (15) (in Main Wiring Harness)

B315 Positive Connection 1 (30a) (in Main Wiring Harness)

* Refer to Applicable Standard Equipment Wiring Diagram

Protected / copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink


Voltage Stabilizer

J532 Voltage Stabilizer
SA9 Fuse 9 (On Fuse Panel A)
T12p 12-Pin Connector
T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station

51 Ground Connection in Luggage Compartment, Right

385 Ground Connection 20 (in Main Wiring Harness)

- * For Vehicles with Start/Stop System
- *2 Refer to Applicable Engine Wiring Diagram
- *3 For Vehicles with 400 W Voltage Stabilizer
- *4 Diameter Depends on Equipment

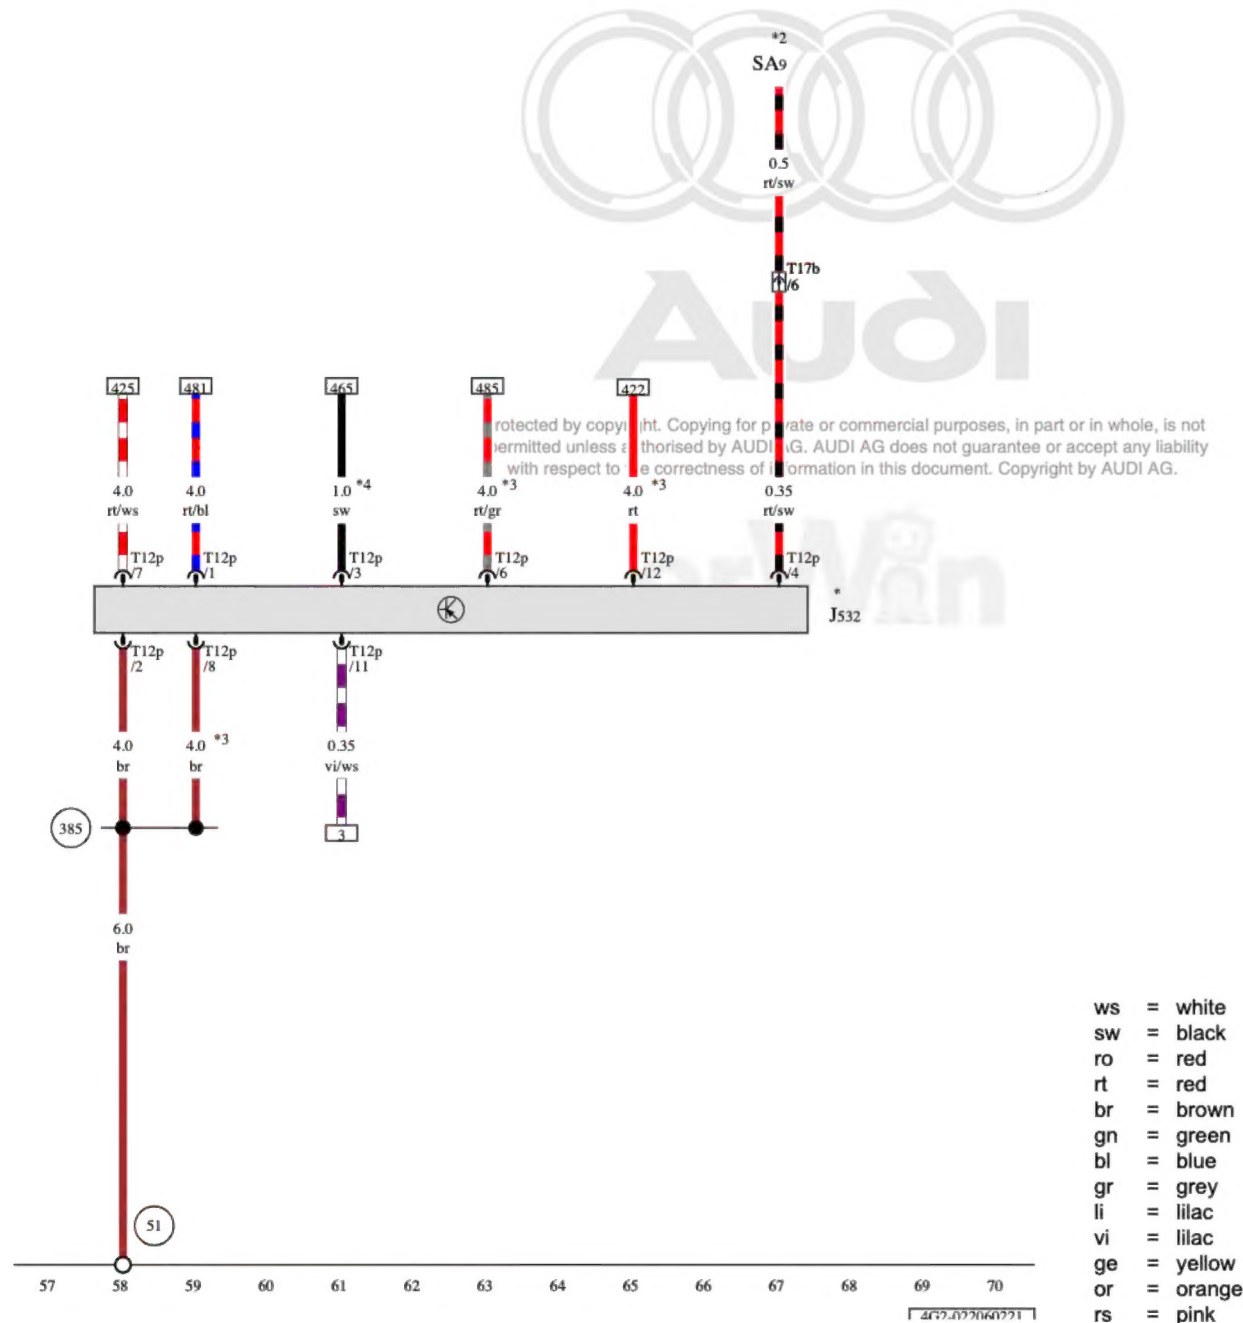

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Positive Connection (30) (in Main Wiring Harness),
Positive Connection 2 (30) (in Main Wiring Harness),
Positive Connection 3 (30) (in Main Wiring Harness)

J963 Reducing Agent Metering System Relay


B272 Positive Connection (30) (in Main Wiring Harness)

B298 Positive Connection 2 (30) (in Main Wiring Harness)

B299 Positive Connection 3 (30) (in Main Wiring Harness)

* Refer to Applicable Engine Wiring Diagram

*2 Depending on Equipment

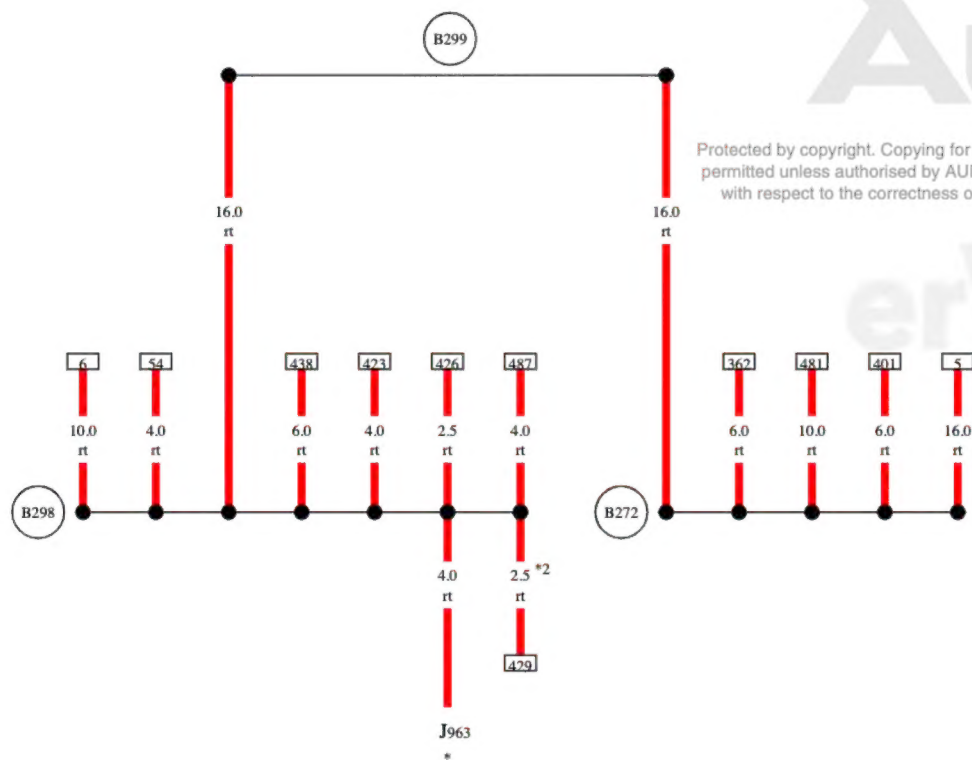

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink


Fuse Panel B, Fuse Panel 1

 
- E256 ASR/ESP Button
- E499 Multimedia Control Head 2
- E538 Electromechanical Parking Brake Button
- J345 Towing Recognition Control Module
- J500 Power Steering Control Module
- J882 Seat Heating Control Module
- J910 Automatic Dimming Interior Rearview Mirror Relay
- J931 Assembly Mount Control Module
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB1 Fuse 1 (On Fuse Panel B)
- SB2 Fuse 2 (On Fuse Panel B)
- T6ai 6-Pin Connector
- T6ak 6-Pin Connector
- T6al 6-Pin Connector, On the Left Front of the Vehicle Floor
- T8a 8-Pin Connector
- T12h 12-Pin Connector
- T12m 12-Pin Connector
- T16d 16-Pin Connector
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station
- Y7 Automatic Dimming Interior Rearview Mirror

B281 Positive Connection 5 (15a) (in Main Wiring Harness)

B283 Positive Connection 7 (15a) (in Main Wiring Harness)

- * Refer to Applicable Standard Equipment Wiring Diagram
- *2 For Vehicles with Seat Heating
- *3 For Vehicles with Rear Seat Entertainment (RSE) Prep
- *4 Refer to Applicable Engine Wiring Diagram

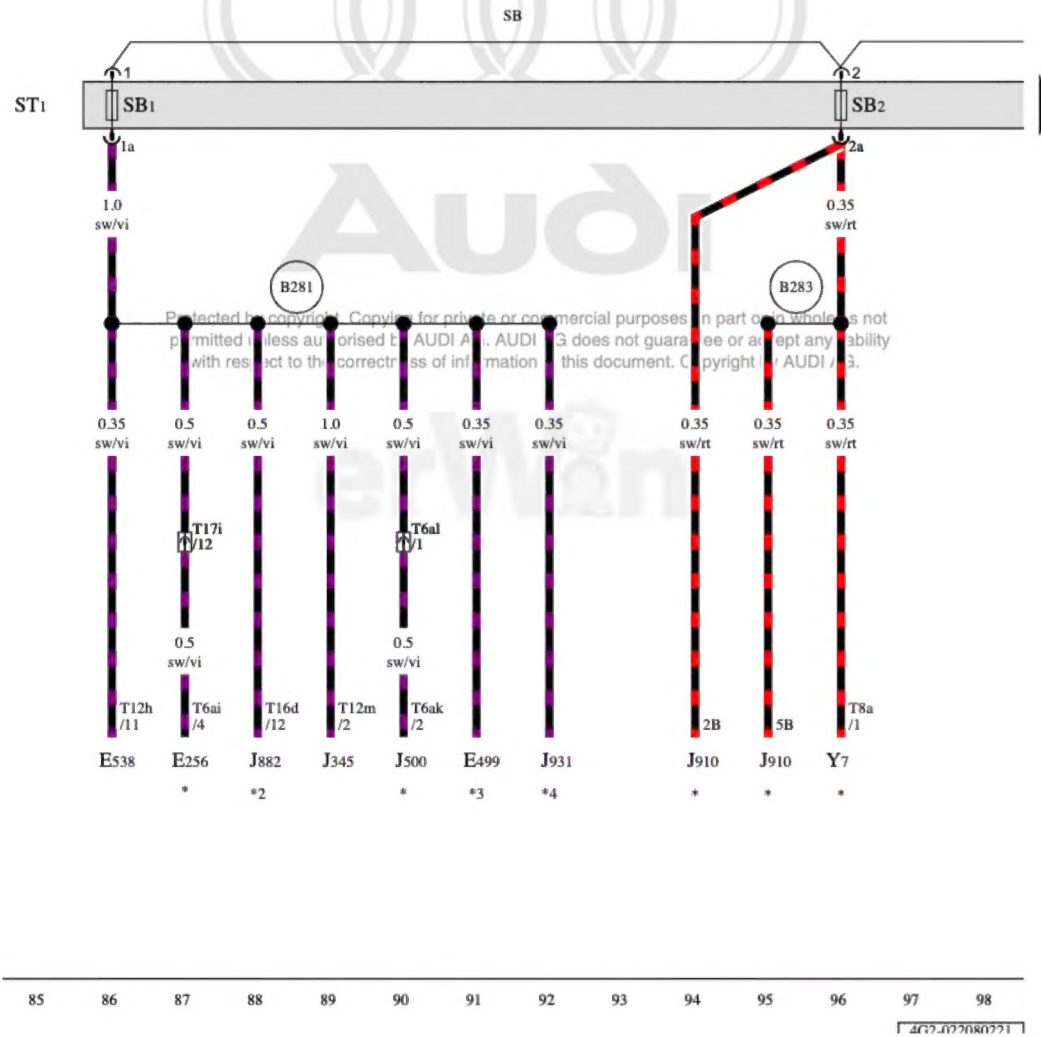



Fuse Panel B, Fuse Panel 1


- J234 Airbag Control Module
- J428 Control Module for Adaptive Cruise Control
- J706 Passenger Occupant Detection System Control Module
- J850 Control Module 2 for Adaptive Cruise Control
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB7 Fuse 7 (On Fuse Panel B)
- SB8 Fuse 8 (On Fuse Panel B)
- T8k 8-Pin Connector
- T8l 8-Pin Connector
- T10e 10-Pin Connector, Under the Right Front Seat
- T100 100-Pin Connector

B280 Positive Connection 4 (15a) (in Main Wiring Harness)


B282 Positive Connection 6 (15a) (in Main Wiring Harness)

* For USA Only

*2 For Vehicles with Adaptive Cruise Control (ACC)

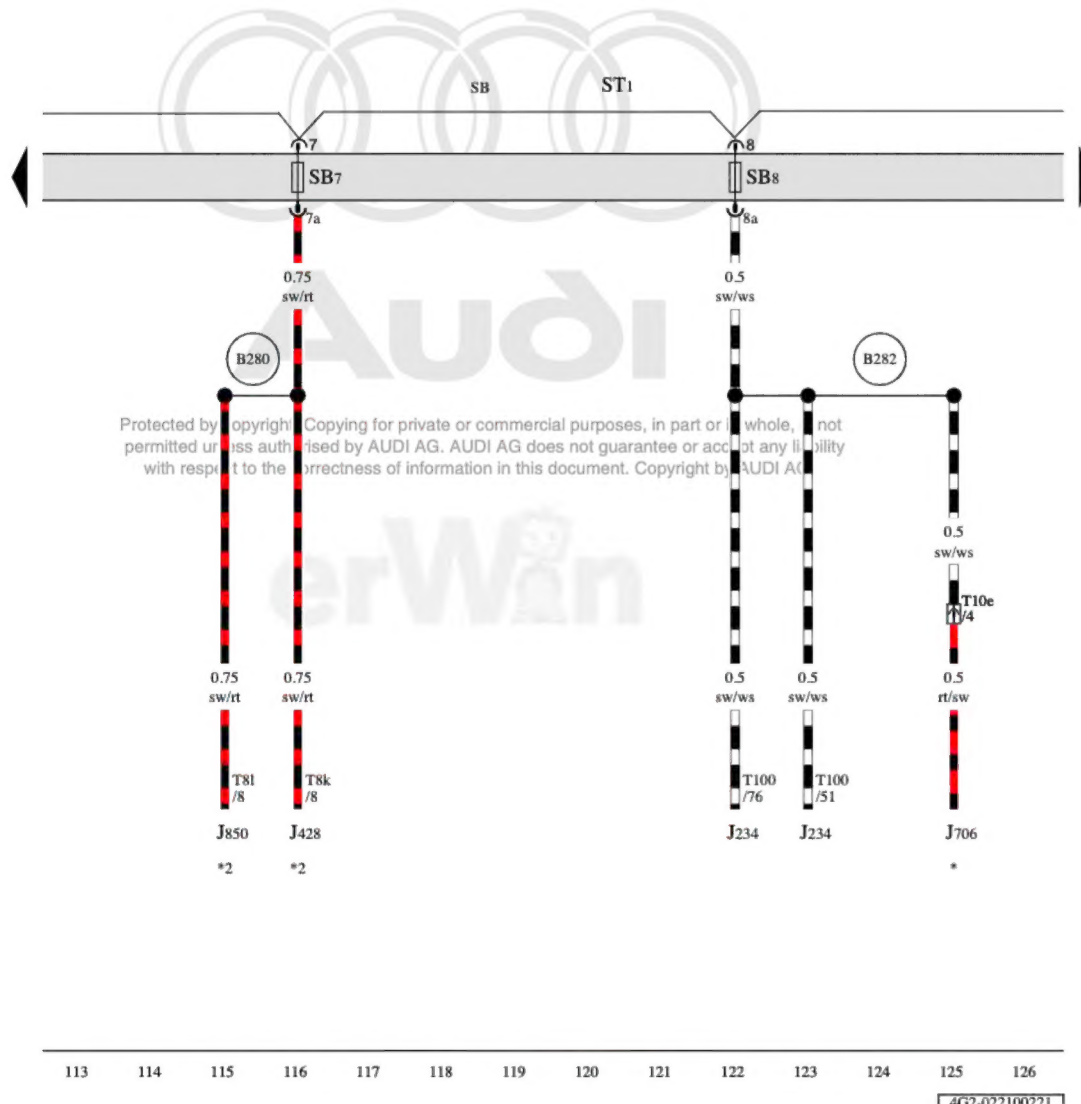

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

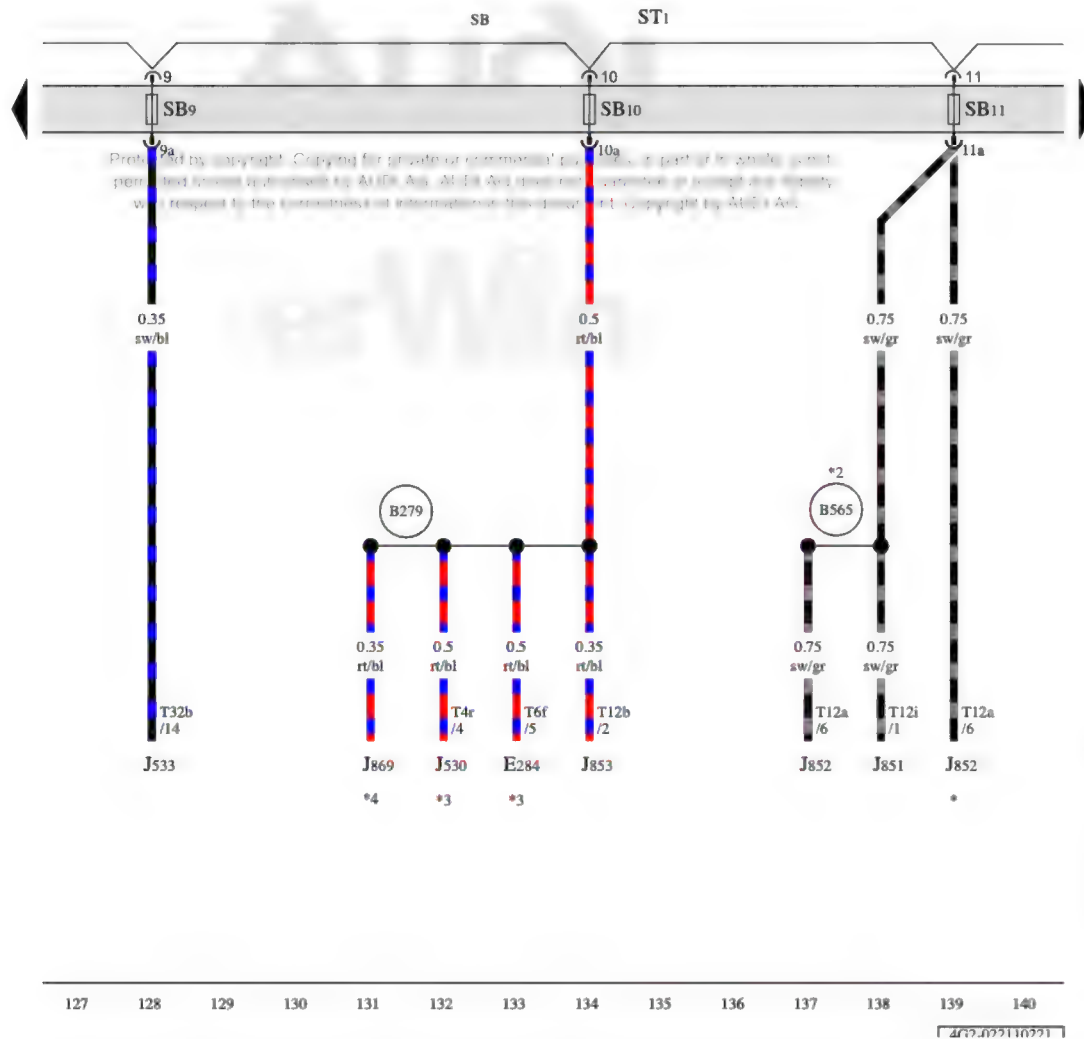

Fuse Panel B, Fuse Panel 1

- E284 Garage Door Opener Control Head
- J530 Garage Door Opener Control Module
- J533 Data Bus on Board Diagnostic Interface
- J851 Image Processing Control Module
- J852 Camera Control Module
- J853 Night Vision System Control Module
- J869 Structure-Borne Sound Control Module
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB9 Fuse 9 (On Fuse Panel B)
- SB10 Fuse 10 (On Fuse Panel B)
- SB11 Fuse 11 (On Fuse Panel B)
- T4r 4-Pin Connector
- T6f 6-Pin Connector
- T12a 12-Pin Connector
- T12b 12-Pin Connector
- T12i 12-Pin Connector
- T32b 32-Pin Connector


B279 Positive Connection 3 (15a) (in Main Wiring Harness)

B565 Connection 32 (in Main Wiring Harness)


- * Optional Equipment
- *2 For Vehicles with Adaptive Cruise Control (ACC)
- *3 For Vehicles with Garage Door Opener
- *4 Refer to Applicable Engine Wiring Diagram

Fuse Panel B, Fuse Panel 1

- J792 Active Steering Control Module
- SA3 Fuse 3 (On Fuse Panel A)
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB12 Fuse 12 (On Fuse Panel B)
- SA12 Fuse 12 (On Fuse Panel A)
- SB13 Fuse 13 (On Fuse Panel B)
- SA13 Fuse 13 (On Fuse Panel A)
- SB14 Fuse 14 (On Fuse Panel B)
- SB15 Fuse 15 (On Fuse Panel B)
- SB16 Fuse 16 (On Fuse Panel B)
- T8m 8-Pin Connector
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station
- D51 Positive Connection 1 (15) (in Engine/Motor Compartment Wiring Harness)
- * Refer to Applicable Engine Wiring Diagram
- *2 Through December 2011
- *3 From January 2012

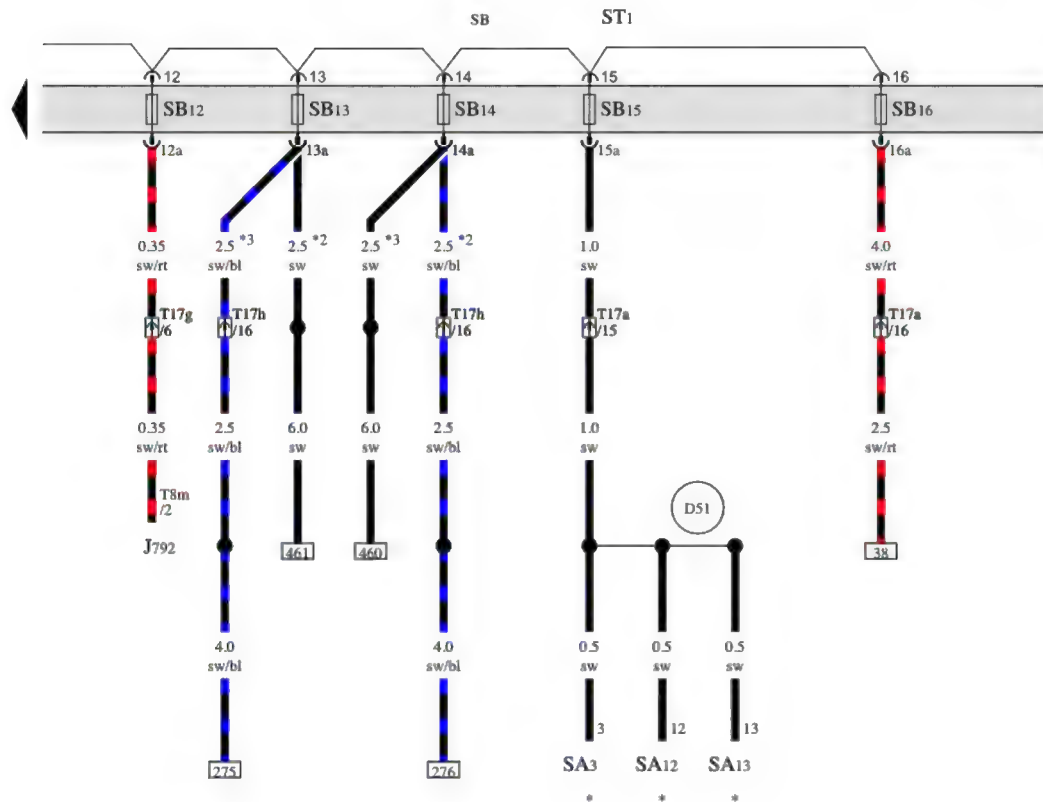

 
- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink



Fuse Panel B, Fuse Panel 2


- J388 Left Rear Door Control Module
- J792 Active Steering Control Module
- J873 Driver Multi-Contour Seat Control Module
- SB Fuse Panel B
- ST2 Fuse Panel 2, Brown
- SB5 Fuse 5 (On Fuse Panel B)
- SB6 Fuse 6 (On Fuse Panel B)
- SB7 Fuse 7 (On Fuse Panel B)
- SB8 Fuse 8 (On Fuse Panel B)
- T5k 5-Pin Connector
- T6g 6-Pin Connector
- T10b 10-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat
- T27c 27-Pin Connector, On the Left B-Pillar
- V1 Sunroof Motor
- * Refer to Applicable Convenience System Wiring Diagram
- *2 Refer to Applicable Seat Adjustment Wiring Diagram
- *3 Avant
- *4 Through May 2011

Protected by copyright. Copying for private or commercial purposes, in particular when linked to internet access, is prohibited by Audi AG. Audi AG does not accept any liability with respect to the correctness of statements in this document. Copyright by Audi AG.

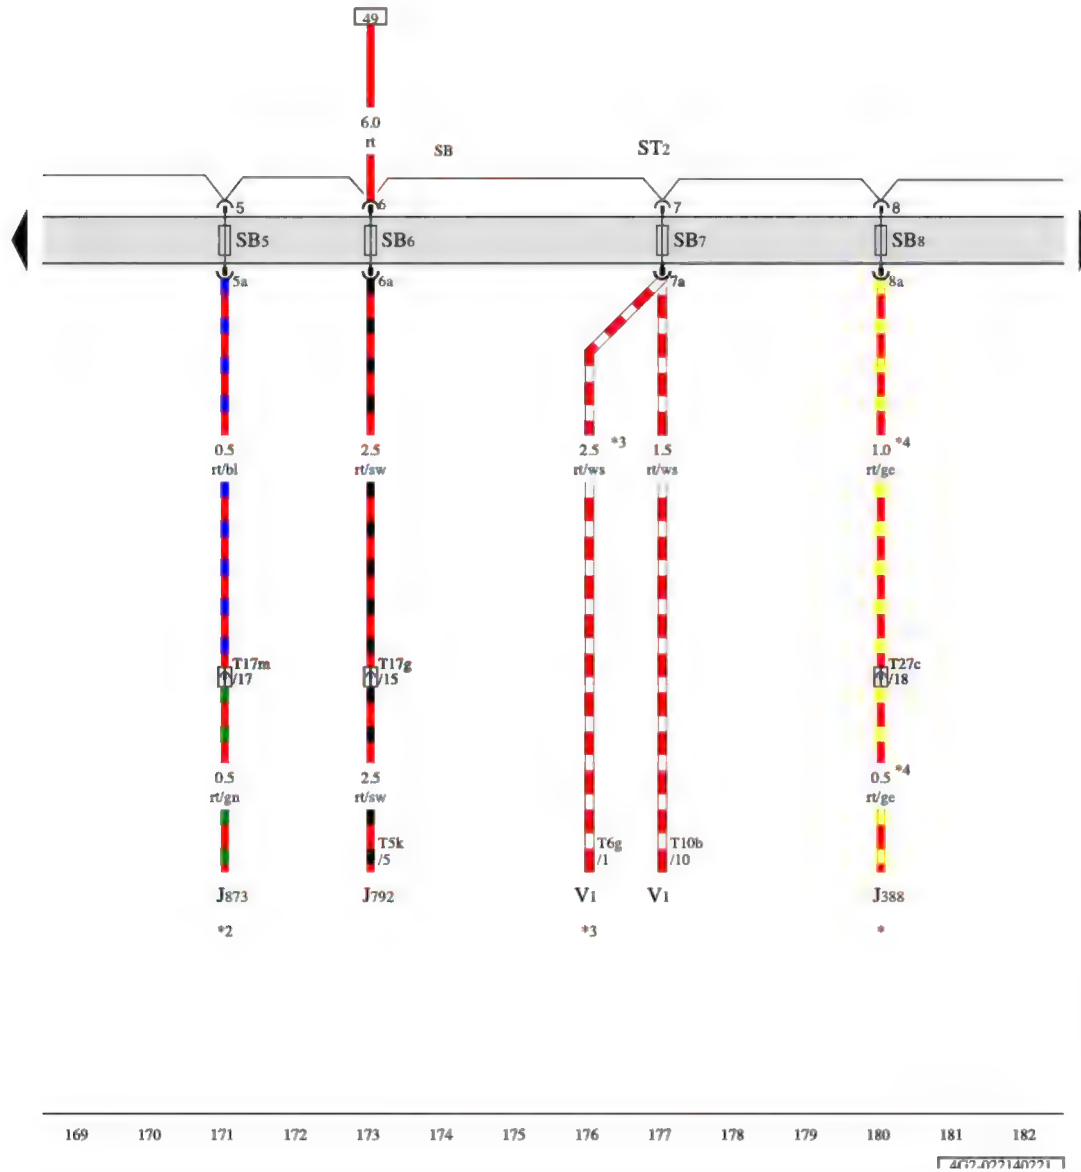


Fuse Panel B, Fuse Panel 2

- E177 Front Passenger Seat Lumbar Support Adjustment Switch
- J364 Auxiliary Heater Control Module
- J386 Driver Door Control Module
- J502 Tire Pressure Monitoring Control Module
- SB Fuse Panel B
- ST2 Fuse Panel 2, Brown
- SB9 Fuse 9 (On Fuse Panel B)
- SB10 Fuse 10 (On Fuse Panel B)
- SB11 Fuse 11 (On Fuse Panel B)
- SB12 Fuse 12 (On Fuse Panel B)
- T2az 2-Pin Connector
- T6be 6-Pin Connector
- T6g 6-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- T27a 27-Pin Connector, On the Left A-Pillar
- V1 Sunroof Motor
- * Refer to Applicable Convenience System Wiring Diagram
- *2 For Vehicles with a Parking Heater
- *3 For Vehicles with Lumbar Support Adjustment
- *4 Avant
- *5 For Vehicles with Tire Pressure Monitoring
- *6 Through May 2011

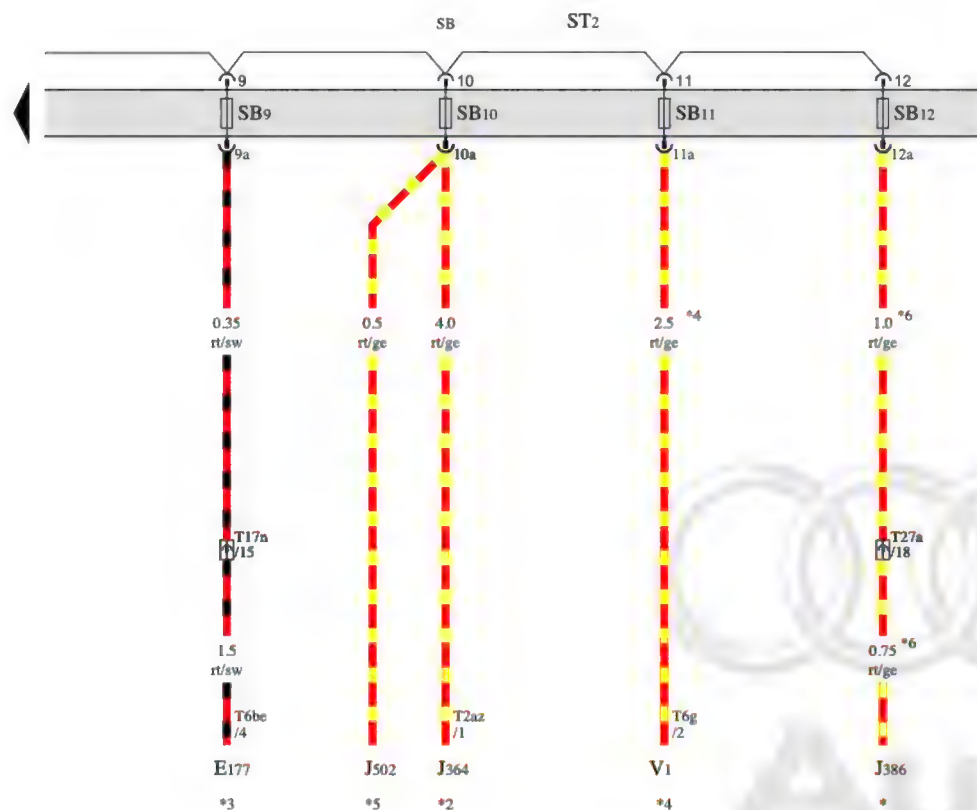


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

 Protected by copyright. Copying for private or commercial purposes in part or in whole is not permitted. Printed in Germany by Audi AG. Audi AG is not responsible for any liability with respect to the correctness of information in this document. Copyright © 2021 Audi AG



Fuse Panel B, Fuse Panel 3

- G397 Rain/Light Recognition Sensor
- J400 Wiper Motor Control Module
- J413 Horn Relay
- J872 Front Passenger Multi-Contour Seat Control Module
- SB Fuse Panel B
- ST3 Fuse Panel 3, Red
- SB6 Fuse 6 (On Fuse Panel B)
- SB7 Fuse 7 (On Fuse Panel B)
- SB8 Fuse 8 (On Fuse Panel B)
- SB9 Fuse 9 (On Fuse Panel B)
- T3o 3-Pin Connector
- T4t 4-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- * Refer to Applicable Standard Equipment Wiring Diagram
- *2 From June 2011

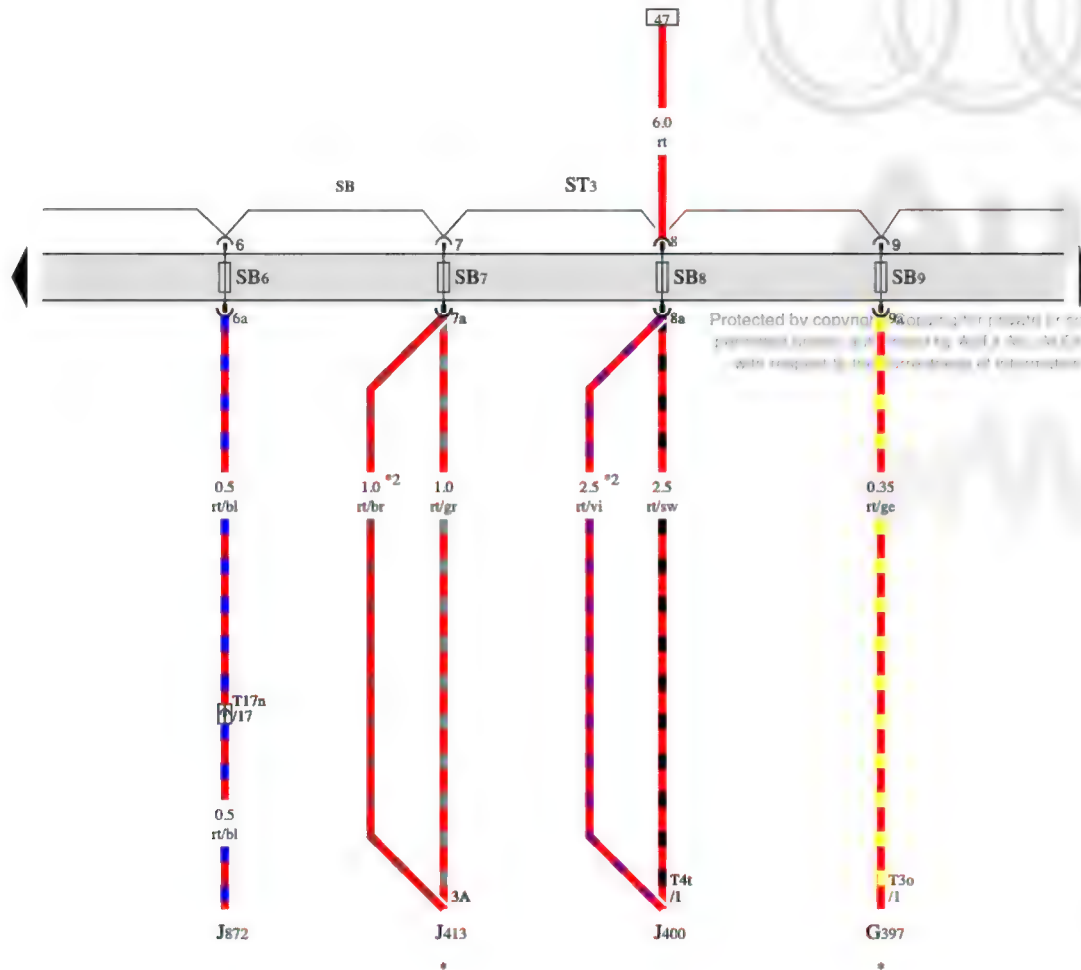

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink



E176	Driver Seat Lumbar Support Adjustment Switch
J387	Front Passenger Door Control Module
J389	Right Rear Door Control Module
SB	Fuse Panel B
ST3	Fuse Panel 3, Red
SB10	Fuse 10 (On Fuse Panel B)
SB11	Fuse 11 (On Fuse Panel B)
SB12	Fuse 12 (On Fuse Panel B)
T6bc	6-Pin Connector
T17m	17-Pin Connector, In the Coupling Point for the Left Front Seat
T27b	27-Pin Connector, On the Right A-Pillar
T27d	27-Pin Connector, On the Right B-Pillar
*	Refer to Applicable Convenience System Wiring Diagram
*2	For Vehicles Without Adjustable Seats
*3	Through May 2011



E380	Multimedia System Control Head
J685	Front Information Display Control Head
J794	Information Electronics Control Module 1
J898	Windshield Projection Head Up Display Control Module
R41	CD Changer
R161	DVD Changer
SC	Fuse Panel C
ST1	Fuse Panel 1, Black
SC1	Fuse 1 (On Fuse Panel C)
SC2	Fuse 2 (On Fuse Panel C)
SC3	Fuse 3 (On Fuse Panel C)
SC4	Fuse 4 (On Fuse Panel C)
T8ag	8-Pin Connector
T8q	8-Pin Connector
T17o	17-Pin Connector, In the Connector Station, Right A-Pillar


- * Refer to Applicable MMI (Information Electronics) Wiring Diagram
- *2 Depending on Equipment
- *3 For Vehicles with Start/Stop System

Fuse Panel C, Fuse Panel 1

- J285 Instrument Cluster Control Module
- J527 Steering Column Electronics Control Module
- J676 Chip Card Reader Control Module
- SC Fuse Panel C
- ST1 Fuse Panel 1, Black
- SC5 Fuse 5 (On Fuse Panel C)
- SC6 Fuse 6 (On Fuse Panel C)
- SC7 Fuse 7 (On Fuse Panel C)
- T16e 16-Pin Connector
- T32 32-Pin Connector
- T32d 32-Pin Connector

A164 Positive Connection 2 (30a) (in Instrument Panel Wiring Harness)

* For Vehicles with Japan Equipment

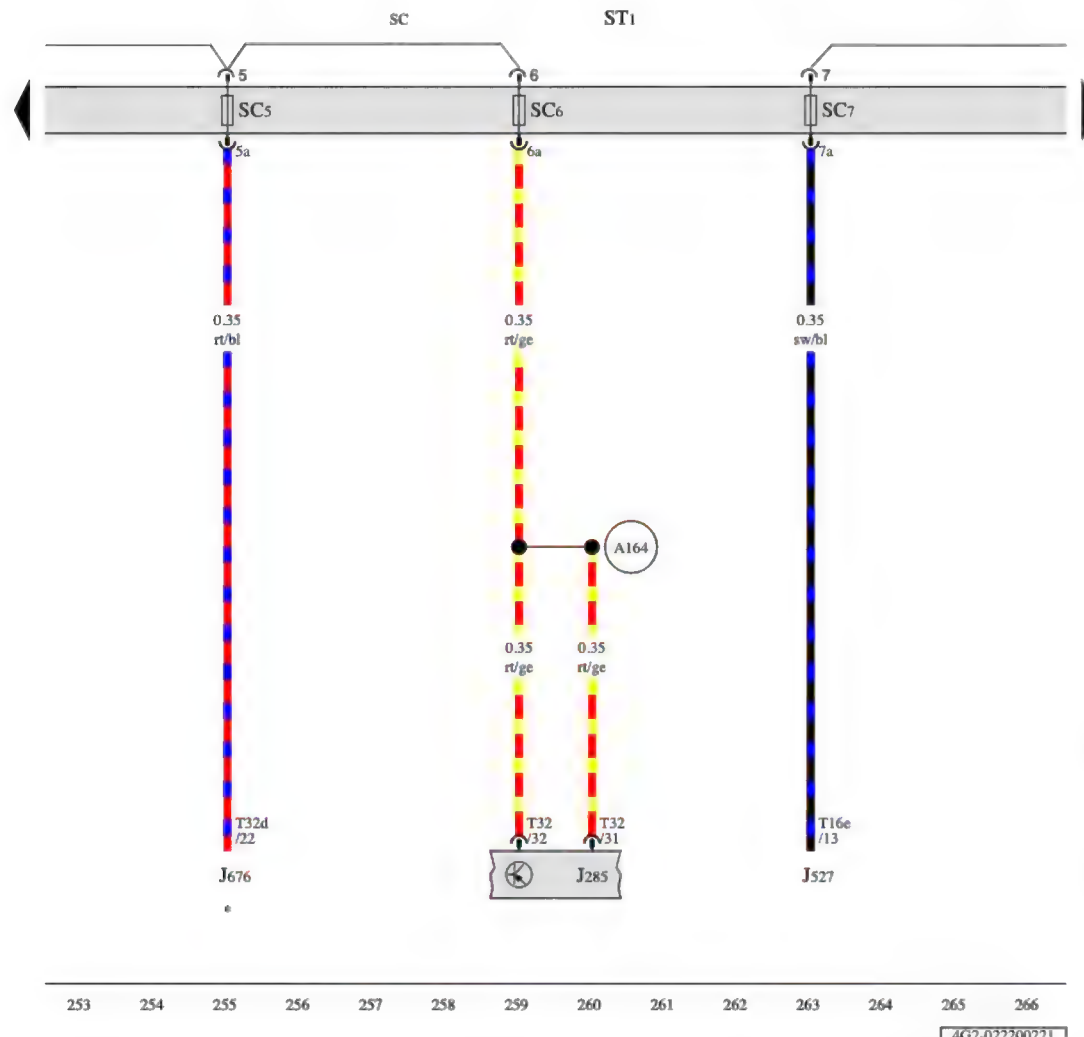


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Fuse Panel C, Fuse Panel 1

- E102 Headlamp Range Control Adjuster
- J431 Headlamp Range Control Module
- J604 Auxiliary Heater Control Module
- J667 Left Headlamp Power Output Module
- J668 Right Headlamp Power Output Module
- J745 Cornering Lamp and Headlamp Range Control Module
- SC Fuse Panel C
- ST1 Fuse Panel 1, Black
- SC8 Fuse 8 (On Fuse Panel C)
- SC9 Fuse 9 (On Fuse Panel C)
- SC10 Fuse 10 (On Fuse Panel C)
- SC11 Fuse 11 (On Fuse Panel C)
- SC12 Fuse 12 (On Fuse Panel C)
- T6I 6-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- T17o 17-Pin Connector, In the Connector Station, Right A-Pillar
- T26 26-Pin Connector
- V48 Left Headlamp Range Control Adjustment Motor
- V49 Right Headlamp Range Control Adjustment Motor

A20 Positive Connection 15a (in Instrument Panel Wiring Harness)

- * For Vehicles Without Automatic Headlamp Range Control
- *2 Refer to Applicable Standard Equipment Wiring Diagram
- *3 For Vehicles with Hybrid Drive
- *4 Through May 2011
- *5 From June 2011

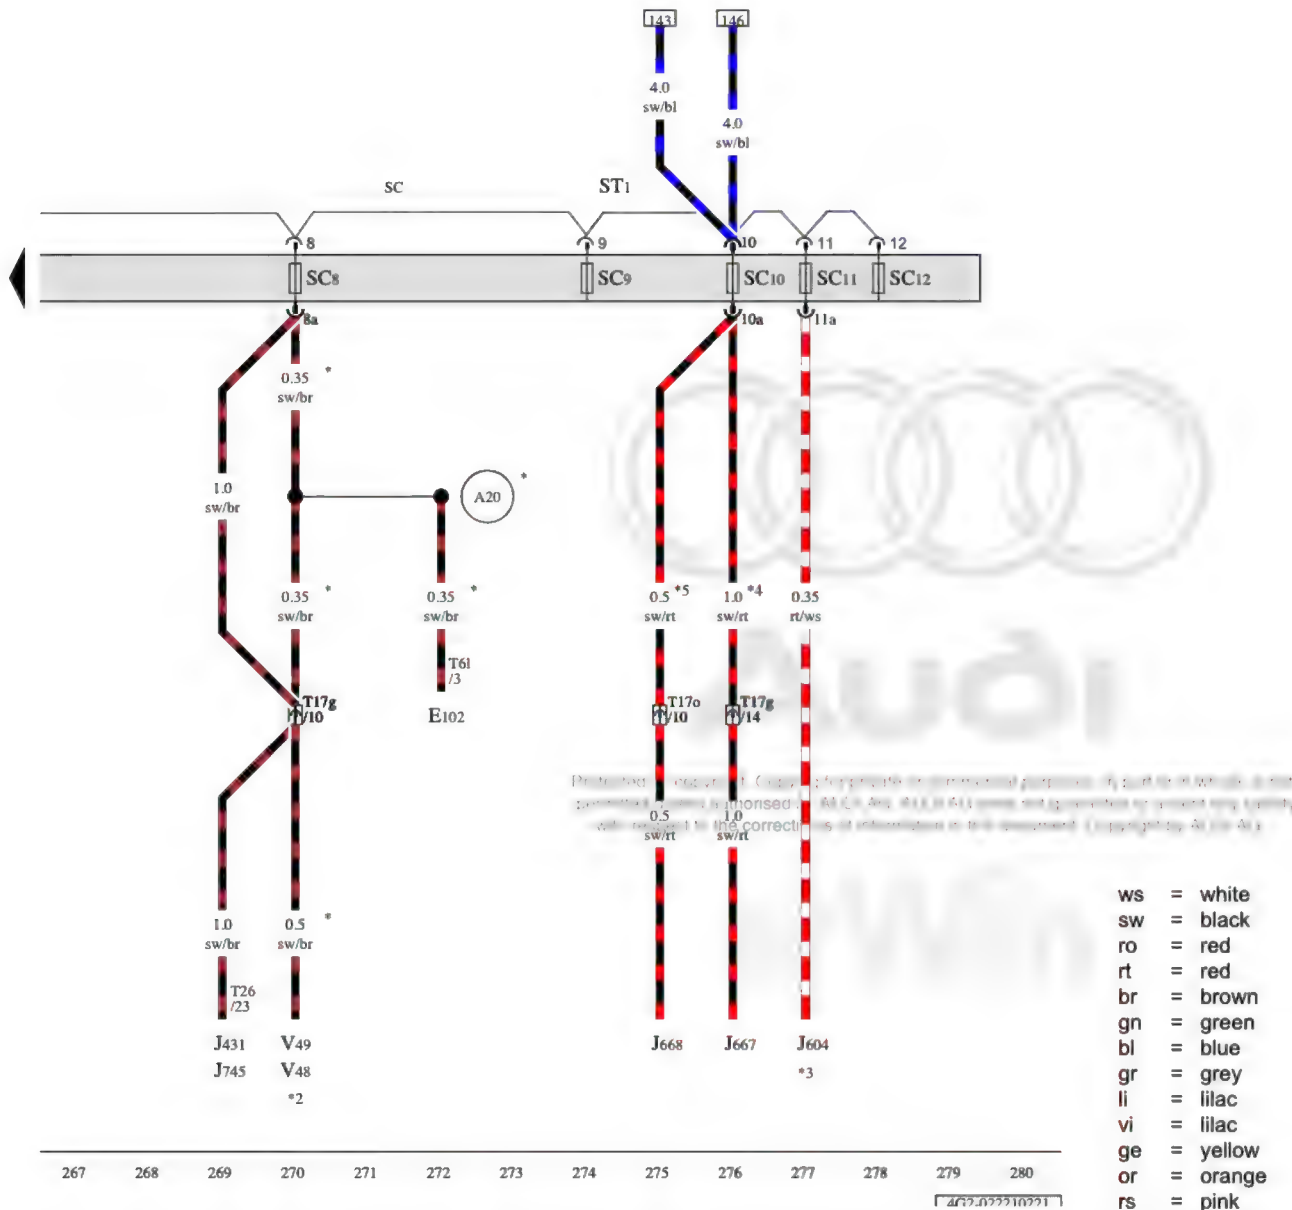



D2	Anti-Theft Immobilizer Reader Coil
J126	Fresh Air Blower Control Module
J255	Climatronic Control Module
J764	Electronic Steering Column Lock Control Module
SC	Fuse Panel C, Instrument Panel Fuse Panel, Left
SC1	Fuse 1 (On Fuse Panel C)
ST2	Fuse Panel 2, Brown
SC2	Fuse 2 (On Fuse Panel C)
SC3	Fuse 3 (On Fuse Panel C)
SC4	Fuse 4 (On Fuse Panel C)
SC5	Fuse 5 (On Fuse Panel C)
T4am	4-Pin Connector
T4cb	4-Pin Connector
T6p	6-Pin Connector
T16	16-Pin Connector
T20c	20-Pin Connector
*	Diagnostic Connector

Fuse Panel C, Fuse Panel 2


- E1 Light Switch
- J527 Steering Column Electronics Control Module
- J866 Power Adjustable Steering Column Control Module
- SC Fuse Panel C, Instrument Panel Fuse Panel, Left
- ST2 Fuse Panel 2, Brown
- SC6 Fuse 6 (On Fuse Panel C)
- SC7 Fuse 7 (On Fuse Panel C)
- SC8 Fuse 8 (On Fuse Panel C)
- SC9 Fuse 9 (On Fuse Panel C)
- SC10 Fuse 10 (On Fuse Panel C)
- SC11 Fuse 11 (On Fuse Panel C)
- SC12 Fuse 12 (On Fuse Panel C)
- T4af 4-Pin Connector
- T6n 6-Pin Connector, Behind the Steering Column Trim Panel
- T16e 16-Pin Connector

A32 Positive Connection (30) (in Instrument Panel Wiring Harness)

- * Refer to Applicable Wiring Diagram
- *2 For Vehicles with Heated Steering Wheel
- *3 For Vehicles with Start/Stop System

Protected by copyright. Copying for private or commercial purposes in part or in whole is not permitted unless authorized by Audi AG. Audi AG does not accept any liability with respect to the correctness of information or the content of this document. Copyright by Audi AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

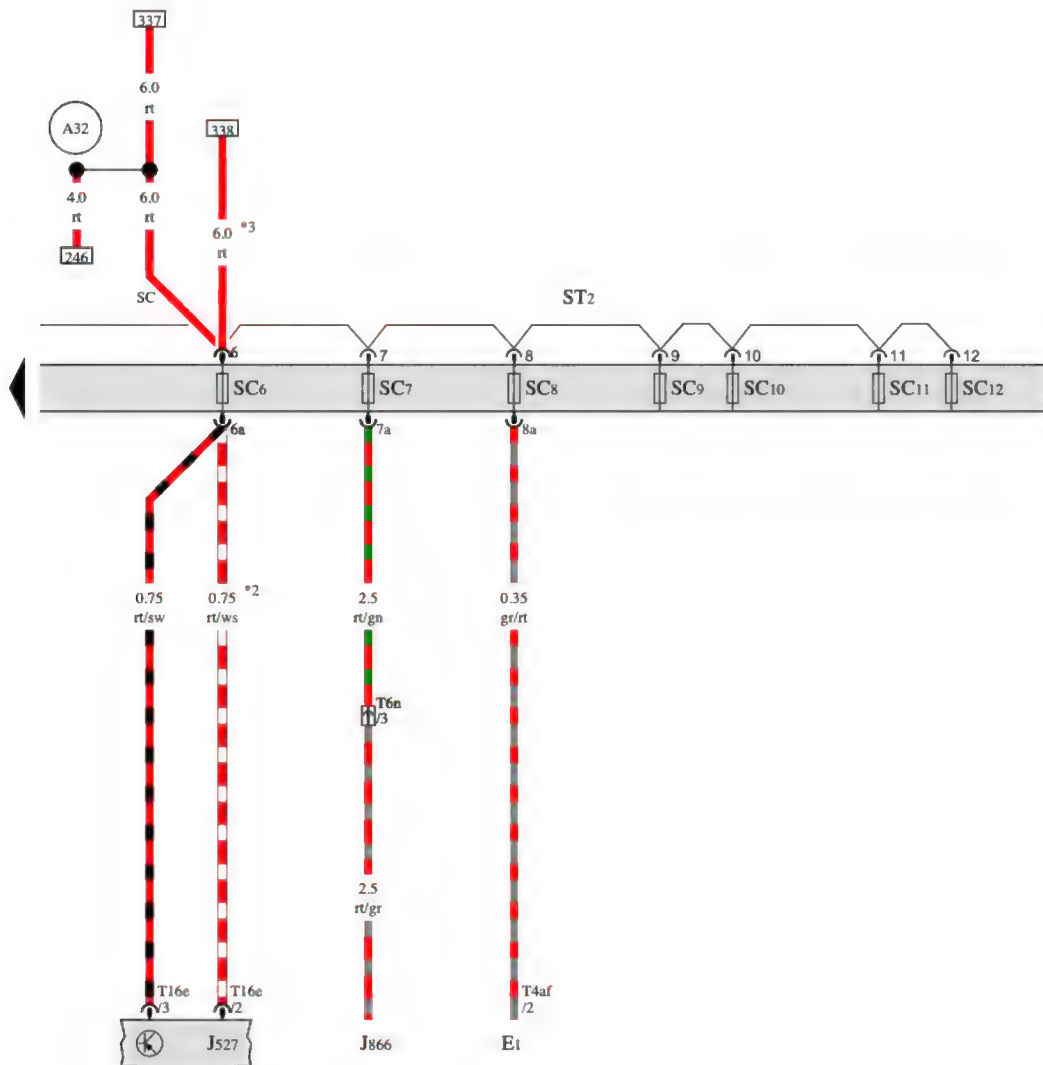


295 296 297 298 299 300 301 302 303 304 305 306 307 308


469920222309231

Fuse Panel D

- G578 Anti-Theft Alarm System Sensor
- H12 Alarm Horn
- J104 ABS Control Module
- J849 Sensor Electronics Control Module
- SD Fuse Panel D, Near the Vehicle Electrical System Control Module
- SD1 Fuse 1 (On Fuse Panel D)
- SD2 Fuse 2 (On Fuse Panel D)
- SD3 Fuse 3 (On Fuse Panel D)
- SD4 Fuse 4 (On Fuse Panel D)
- SD5 Fuse 5 (On Fuse Panel D)
- T3n 3-Pin Connector
- T4v 4-Pin Connector
- T47 47-Pin Connector
- T50 50-Pin Connector
- B519 Central Locking/Anti-Theft Alarm System/Infrared Connection (30a) (in Main Wiring Harness)
- * For Vehicles with Interior Monitoring

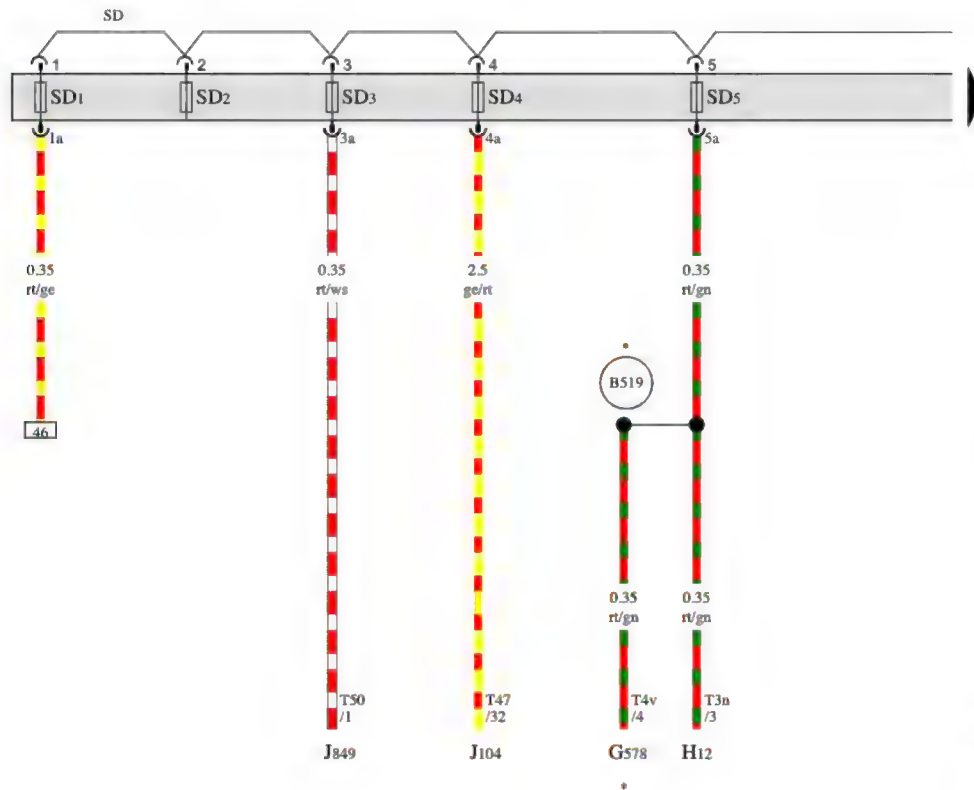

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

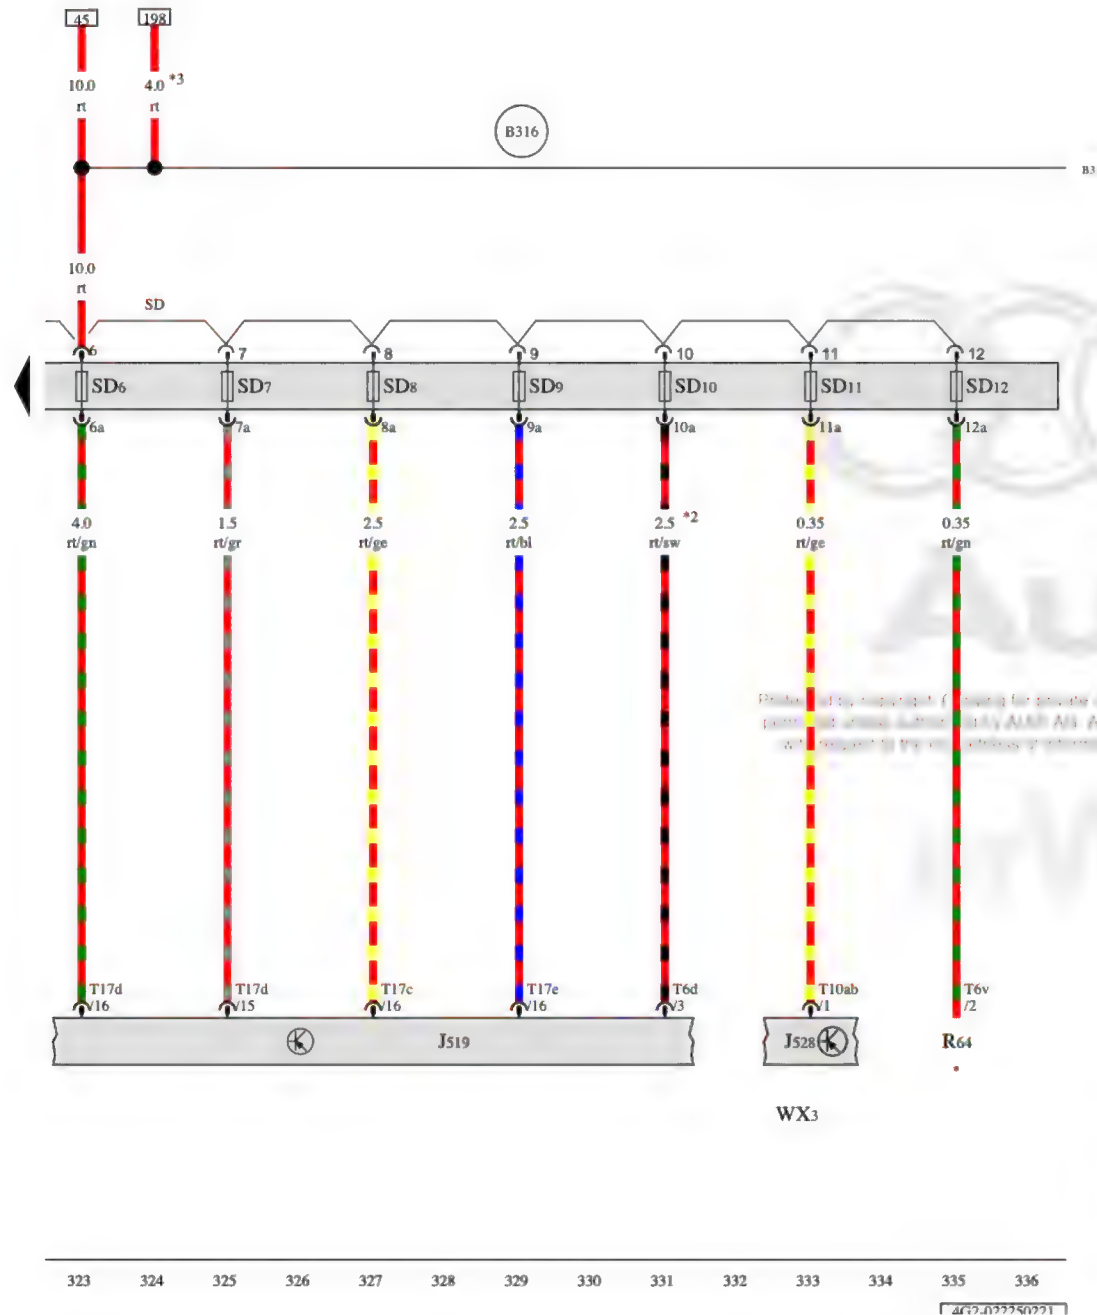

Fuse Panel D, Positive Connection 2 (30a) (in Main Wiring Harness)

- J519 Vehicle Electrical System Control Module
- J528 Roof Electronics Control Module
- R64 Parking Heater Radio Receiver
- SD Fuse Panel D, Near the Vehicle Electrical System Control Module
- SD6 Fuse 6 (On Fuse Panel D)
- SD7 Fuse 7 (On Fuse Panel D)
- SD8 Fuse 8 (On Fuse Panel D)
- SD9 Fuse 9 (On Fuse Panel D)
- SD10 Fuse 10 (On Fuse Panel D)
- SD11 Fuse 11 (On Fuse Panel D)
- SD12 Fuse 12 (On Fuse Panel D)
- T6d 6-Pin Connector
- T6v 6-Pin Connector
- T10ab 10-Pin Connector
- T17c 17-Pin Connector
- T17d 17-Pin Connector
- T17e 17-Pin Connector
- WX3 Front Roof Module

B316 Positive Connection 2 (30a) (in Main Wiring Harness)

- * For Vehicles with a Parking Heater
- *2 For Vehicles with Seat Heating
- *3 For Vehicles with Hybrid Drive

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink




- * Refer to Applicable Wiring Diagram for ABS
- *2 Refer to Applicable Seat Adjustment Wiring Diagram
- *3 Relay Panel Under the Instrument Panel, Left
- *4 Threaded Connection in the Plenum Chamber E-Box
- *5 Refer to Applicable Engine Wiring Diagram
- *6 For Vehicles with Start/Stop System

337 338 339 340 341 342 343 344 345 346 347 348 349 350

Fuse Panel F, Fuse Panel 1

- E409 Left Rear Seat Massage Button
- E410 Right Rear Seat Massage Button
- J345 Towing Recognition Control Module
- J387 Front Passenger Door Control Module
- J540 Electromechanical Parking Brake Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- ST1 Fuse Panel 1, Black
- SF2 Fuse 2 (On Fuse Panel F)
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- T12m 12-Pin Connector
- T30a 30-Pin Connector
- U13 Converter with Socket, 12 V-230 V
- Z105 Cupholder with Heating and Cooling Element
- * Refer to Applicable Convenience System Wiring Diagram
- *2 For Vehicles with Trailer Socket
- *3 For Vehicles with China Equipment

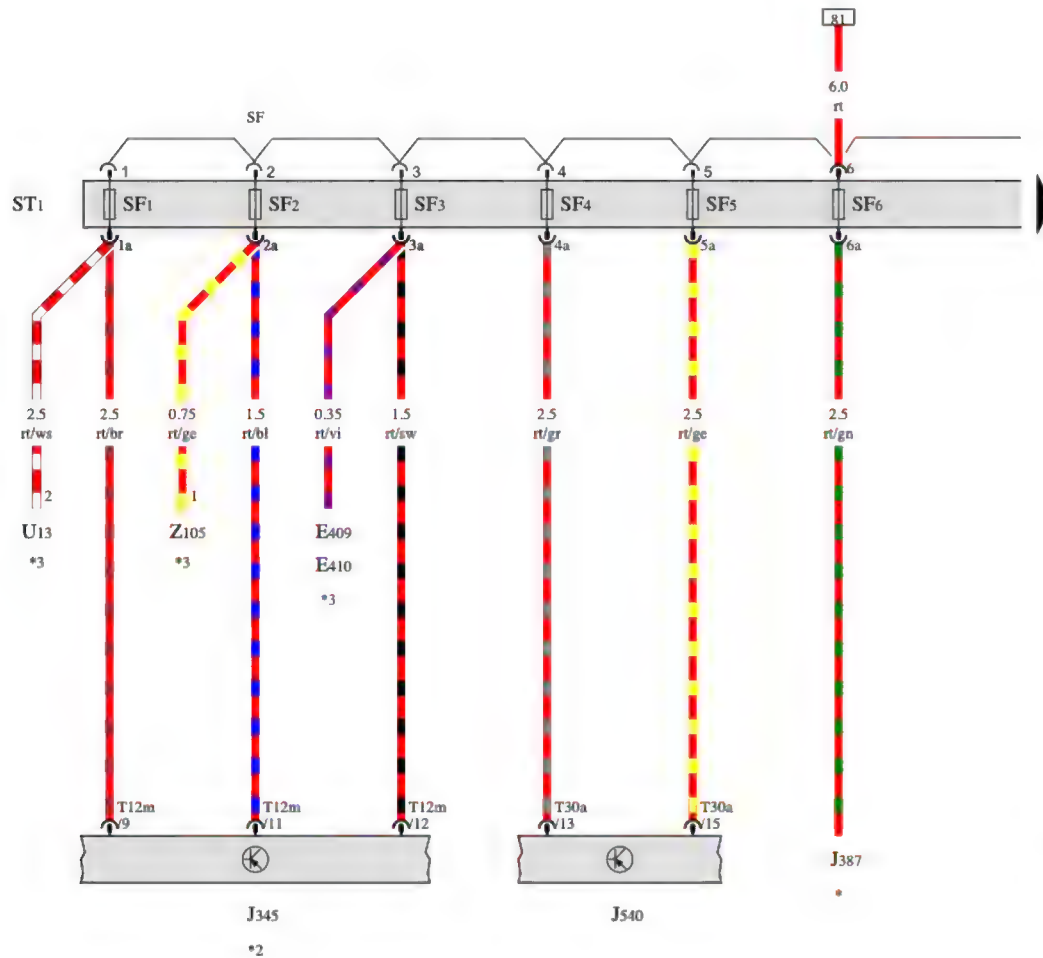


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or non-commercial purposes are permitted in whole or in part, provided the source is acknowledged. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without prior written permission from Audi AG.

Fuse Panel F, Fuse Panel 1

- E265 Rear A/C Display Control Head
- J393 Comfort System Central Control Module
- J799 Right Front Seat Ventilation Control Module
- J882 Seat Heating Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST1 Fuse Panel 1, Black
- SF7 Fuse 7 (On Fuse Panel F)
- SF8 Fuse 8 (On Fuse Panel F)
- SF9 Fuse 9 (On Fuse Panel F)
- SF10 Fuse 10 (On Fuse Panel F)
- SF11 Fuse 11 (On Fuse Panel F)
- SF12 Fuse 12 (On Fuse Panel F)
- T3r 3-Pin Connector
- T6i 6-Pin Connector, In the Coupling Point for the Right Front Seat
- T12o 12-Pin Connector, In the Luggage Compartment, Right
- T16d 16-Pin Connector
- T17s 17-Pin Connector
- B317 Positive Connection 3 (30a) (in Main Wiring Harness)
- * Climate Control, Basic Climatronic
- *2 Climate Control, Comfort Climatronic
- *3 For Vehicles with Special Functions Interface
- *4 For Vehicles with Seat Ventilation

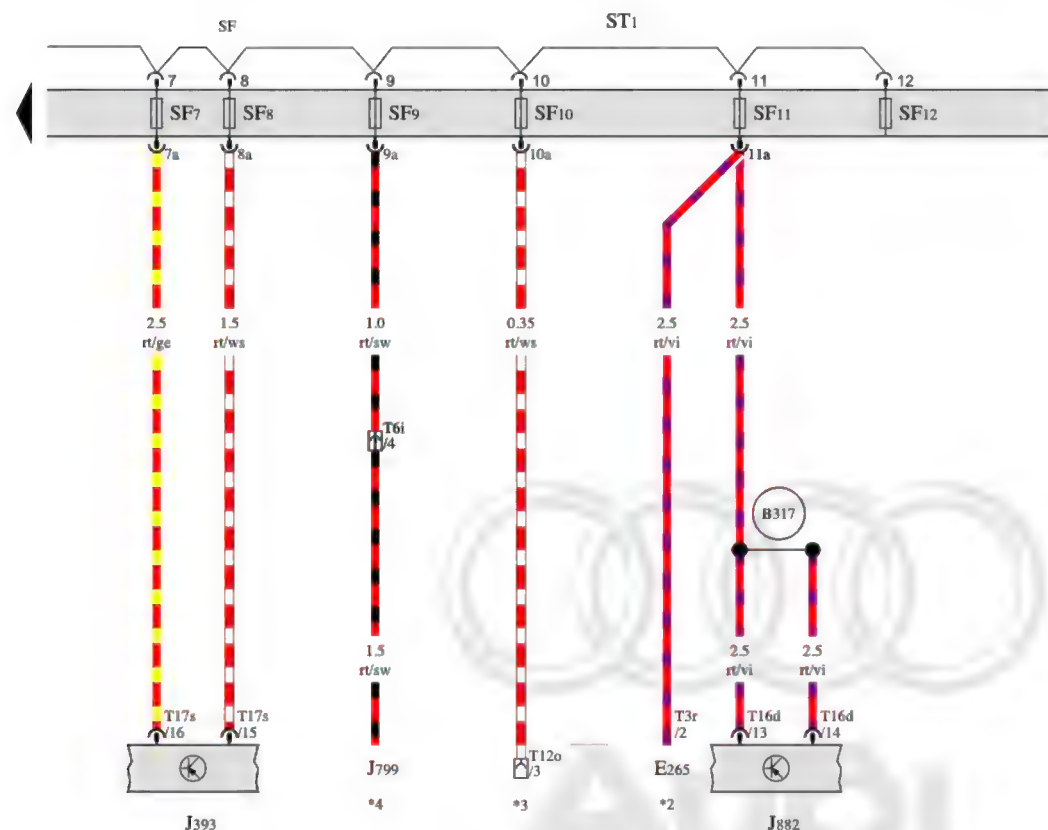


Protected by copyright. Copying for private or commercial purposes, in particular when it is not permitted where authorized by Audi AG. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Audi Copyright, Audi AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Fuse Panel F, Fuse Panel 2

- J807 Sockets Relay
- J854 Left Front Seat Belt Tensioner Control Module
- J855 Right Front Seat Belt Tensioner Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- SF2 Fuse 2 (On Fuse Panel F)
- ST2 Fuse Panel 2, Red
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- T4ac 4-Pin Connector
- T4x 4-Pin Connector
- U1 Cigarette Lighter
- U5 12 V Socket
- U9 Rear Cigarette Lighter
- U13 Converter with Socket, 12 V-230 V
- U18 12 V Socket 2
- U19 12 V Socket 3
- U20 12 V Socket 4
- Z105 Cupholder with Heating and Cooling Element
- B275 Positive Connection (87) (in Main Wiring Harness)
- B350 Positive Connection 1 (87a) (in Main Wiring Harness)
- B351 Positive Connection 2 (87a) (in Main Wiring Harness)
- * Refer to Applicable Standard Equipment Wiring Diagram
- *2 Refer to Applicable Airbag Wiring Diagram
- *3 For Vehicles with China Equipment

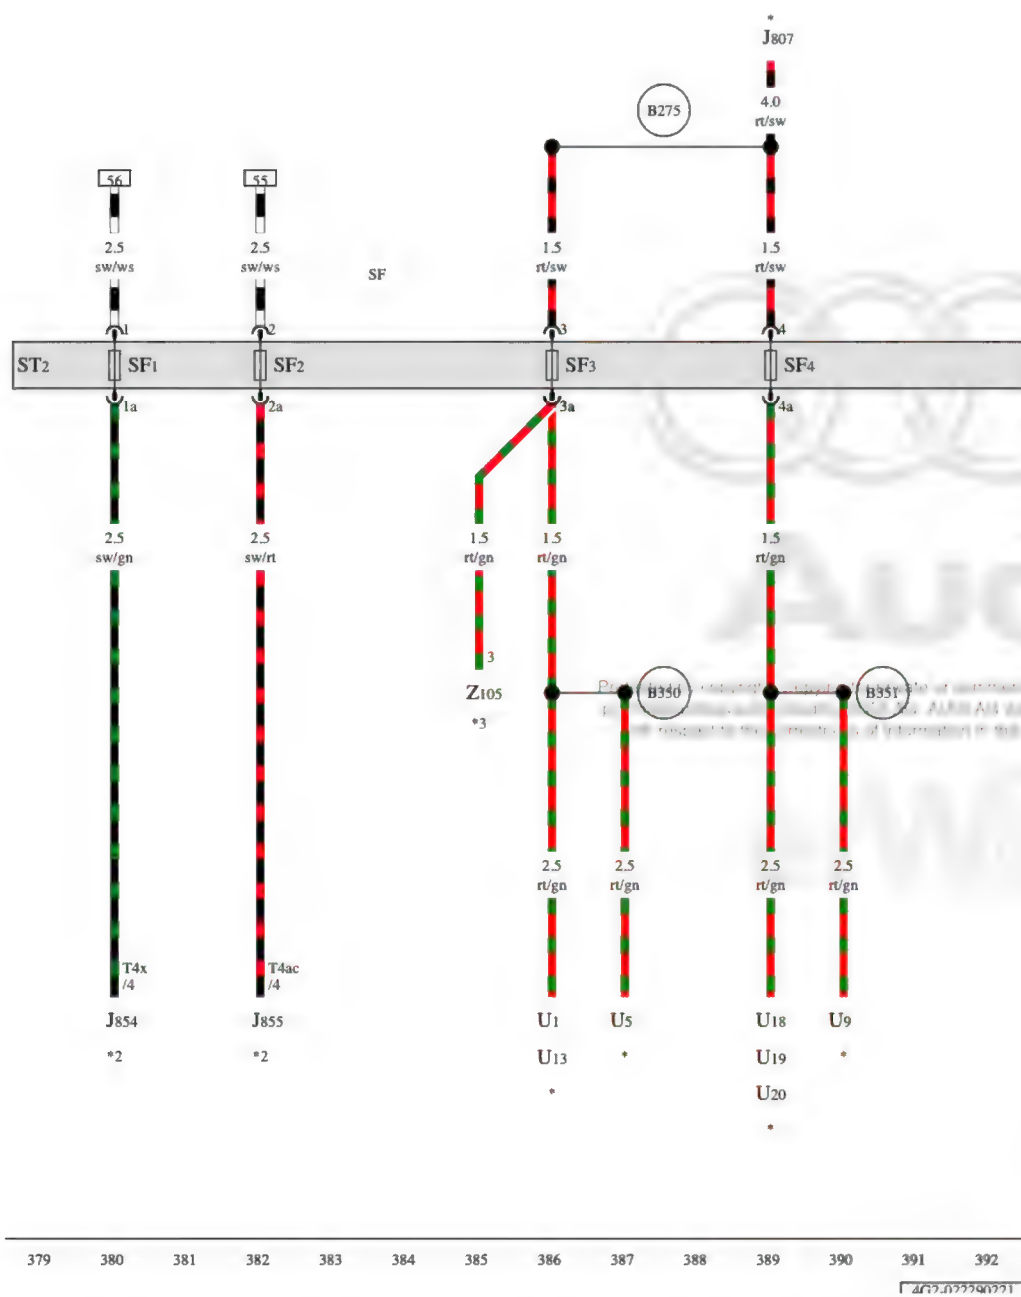


ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink



E538	Electromechanical Parking Brake Button
J197	Level Control System Control Module
J250	Electronic Damping Control Module
J389	Right Rear Door Control Module
J393	Comfort System Central Control Module
J605	Rear Lid Control Module
SF	Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
ST2	Fuse Panel 2, Red
SF5	Fuse 5 (On Fuse Panel F)
SF6	Fuse 6 (On Fuse Panel F)
SF7	Fuse 7 (On Fuse Panel F)
SF8	Fuse 8 (On Fuse Panel F)
SF9	Fuse 9 (On Fuse Panel F)
T4bx	4-Pin Connector
T9a	9-Pin Connector
T12h	12-Pin Connector
T17r	17-Pin Connector
T27d	27-Pin Connector, On the Right B-Pillar
*	Refer to Applicable Convenience System Wiring Diagram
*2	Depending on Equipment
*3	Avant
*4	From June 2011

Fuse Panel F, Fuse Panel 2

- J787 Digital Sound System Control Module 2
- R86 Cellular Telephone Amplifier
- R126 Telephone Baseplate
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST2 Fuse Panel 2, Red
- SF10 Fuse 10 (On Fuse Panel F)
- SF11 Fuse 11 (On Fuse Panel F)
- SF12 Fuse 12 (On Fuse Panel F)
- T4az 4-Pin Connector
- T4y 4-Pin Connector
- T5g 5-Pin Connector
- T32f 32-Pin Connector
- * For Vehicles with Bang & Olufsen Sound System
- *2 Not for USA
- *3 For Vehicles with Cell Phone Preparation
- *4 For Vehicles with Bluetooth

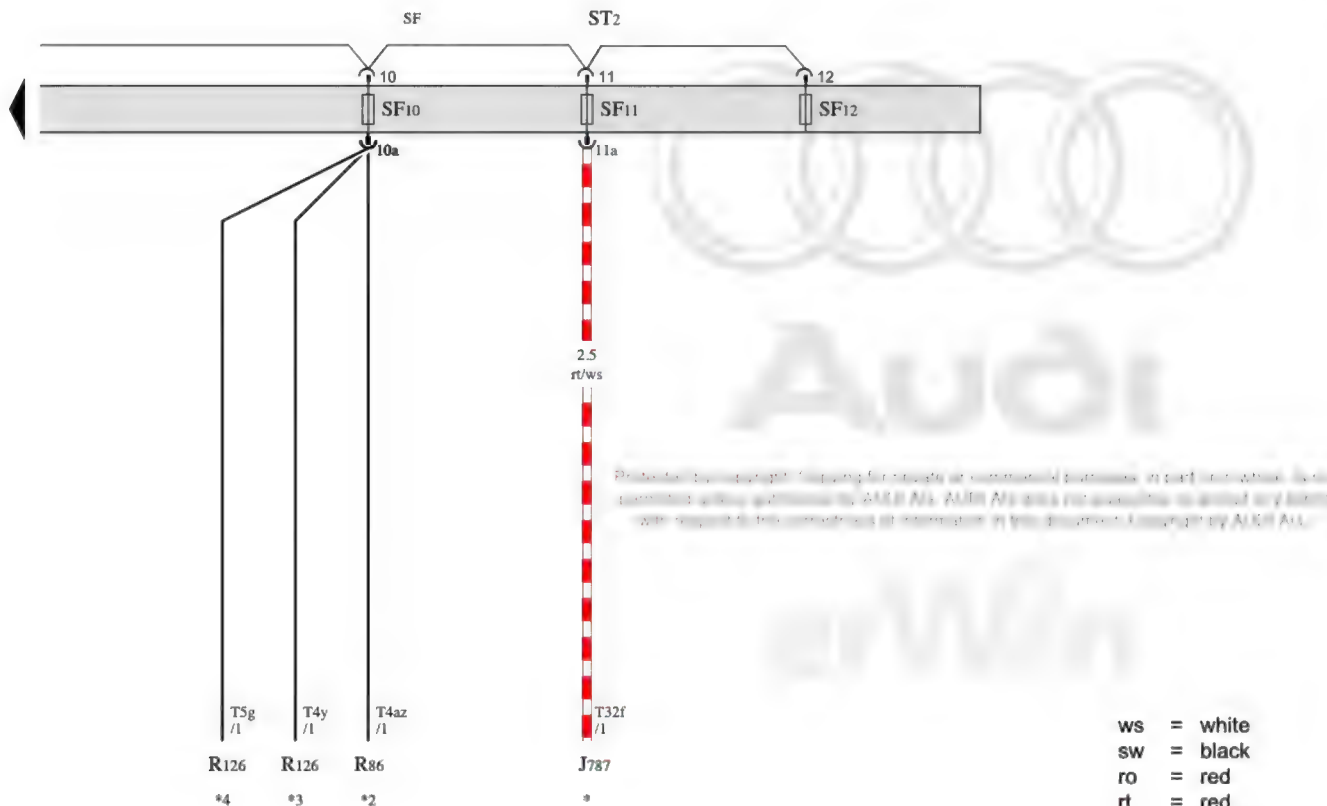

407 408 409 410 411 412 413 414 415 416 417 418 419 420

469,099,109,11


Fuse Panel F, Fuse Panel 3

- J525 Digital Sound System Control Module
- J794 Information Electronics Control Module 1
- J880 Reducing Agent Metering System Control Module
- J909 Fuel Tank Leak Detection Control Module
- J931 Assembly Mount Control Module
- J937 Fan Activation Relay
- R Radio
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- SF2 Fuse 2 (On Fuse Panel F)
- ST3 Fuse Panel 3, Brown
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- T3s 3-Pin Connector
- T8f 8-Pin Connector
- T10i 10-Pin Connector
- T38 38-Pin Connector

B300 Positive Connection 4 (30) (in Main Wiring Harness)

- * For USA Only
- *2 For Vehicles with Bose Sound System
- *3 For Vehicles with Bang & Olufsen Sound System
- *4 For Vehicles with Audi Sound System
- *5 Refer to Applicable Wiring Diagram
- *6 For Vehicles with Hybrid Drive
- *7 Refer to Applicable Engine Wiring Diagram
- *8 For Vehicles with 400 W Voltage Stabilizer
- *9 Depending on Equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

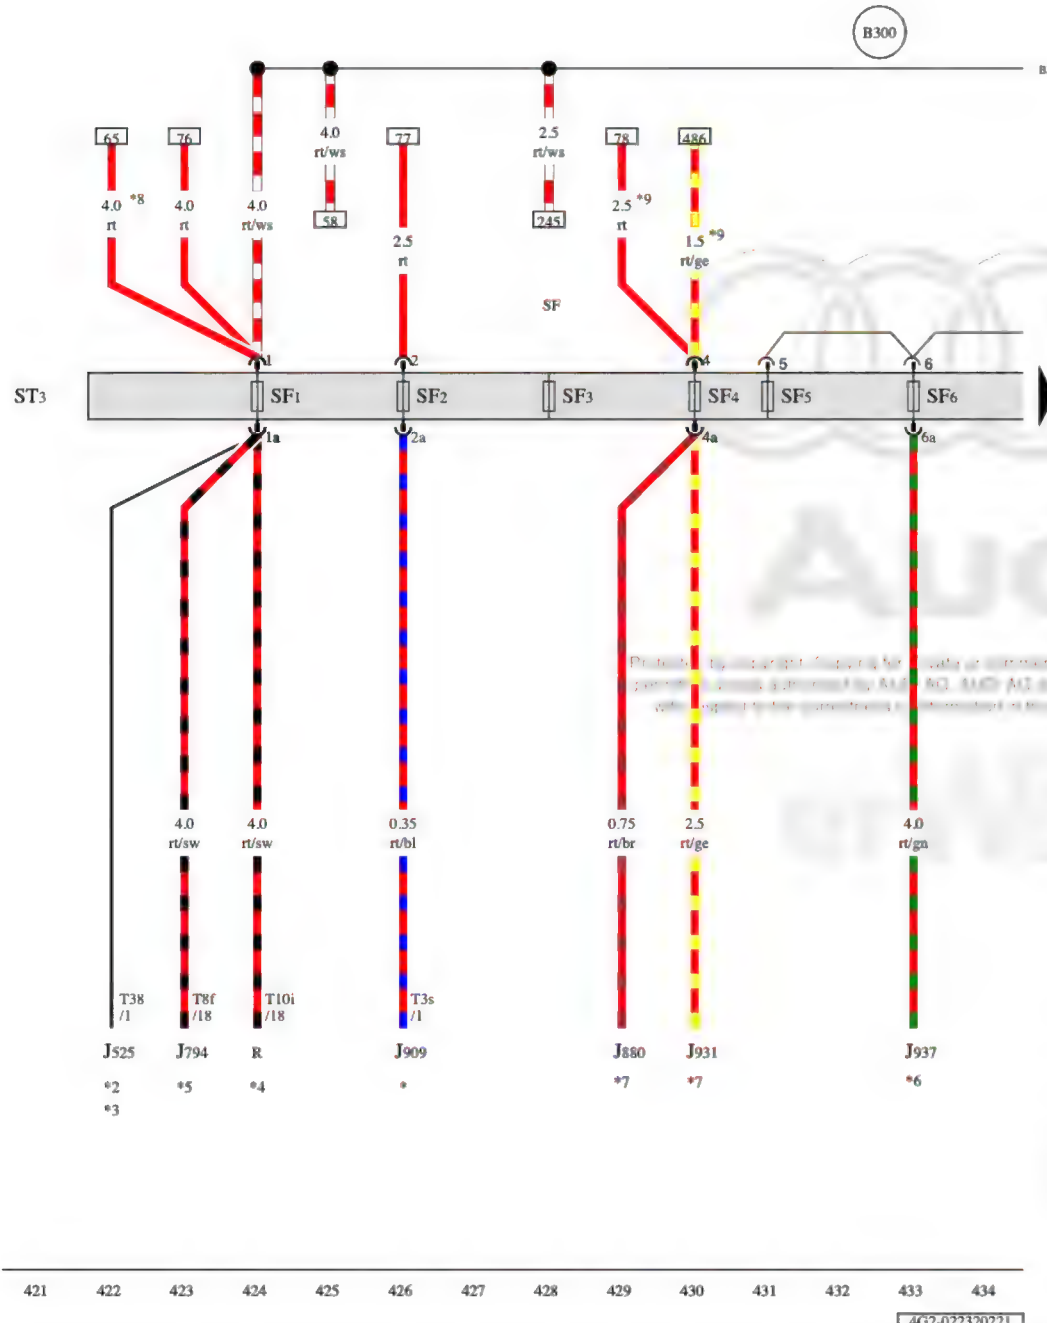



ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Fuse Panel F, Fuse Panel 4


- G476 Clutch Position Sensor
- J197 Level Control System Control Module
- J250 Electronic Damping Control Module
- J393 Comfort System Central Control Module
- J446 Parking Aid Control Module
- J540 Electromechanical Parking Brake Control Module
- J587 Selector Lever Sensor System Control Module
- J791 Parallel Parking Assistance Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- SF2 Fuse 2 (On Fuse Panel F)
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- ST4 Fuse Panel 4, Green
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- T6ah 6-Pin Connector
- T9a 9-Pin Connector
- T16i 16-Pin Connector

B286 Positive Connection 10 (15a) (in Main Wiring Harness)


B470 Connection 6 (in Main Wiring Harness)

- * For Vehicles with Parallel Parking Assistance
- *2 For Vehicles with Park Distance Control (PDC)
- *3 Refer to Applicable Convenience System Wiring Diagram
- *4 Refer to Applicable Wiring Diagram for Automatic Transmission
- *5 Refer to Applicable Engine Wiring Diagram
- *6 Refer to the Applicable Multimedia System Wiring Diagram
- *7 Depending on Equipment
- *8 From June 2011

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

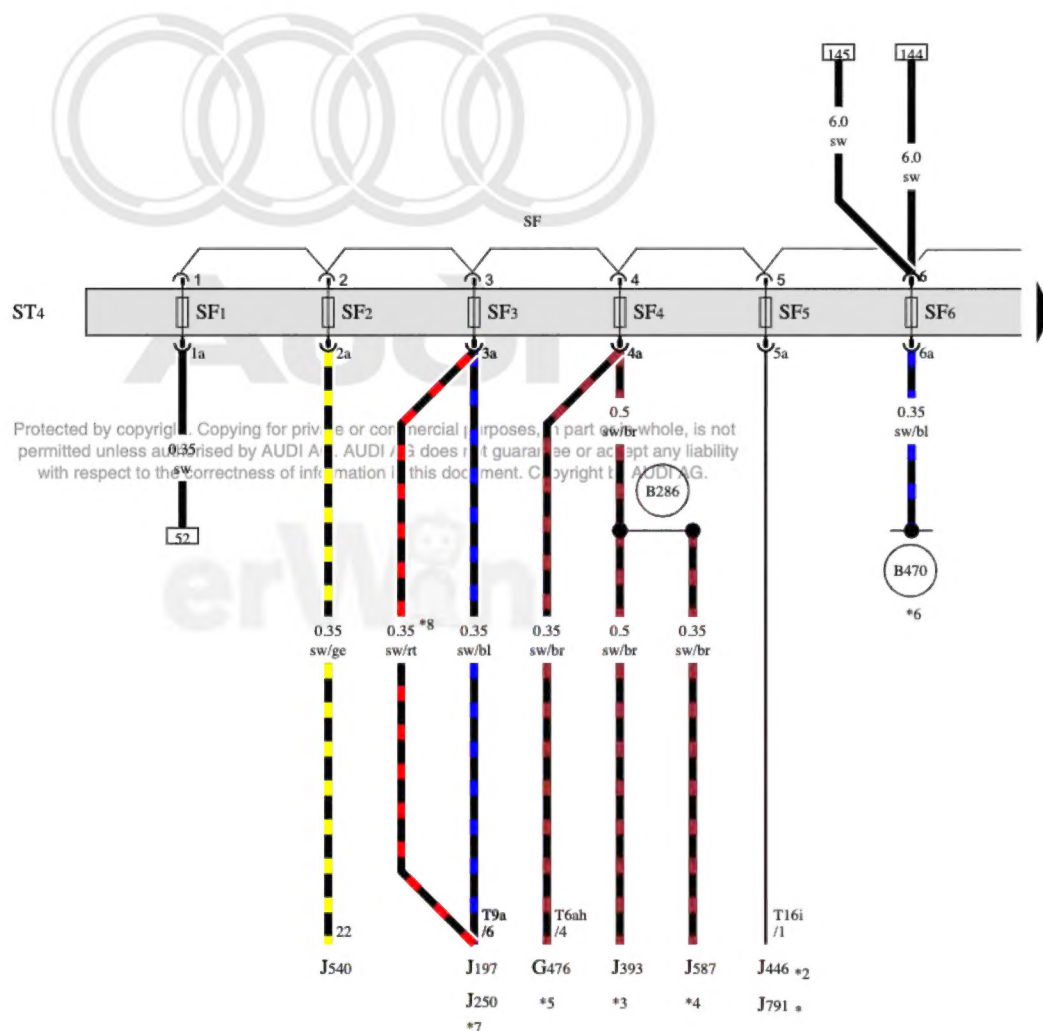

449 450 451 452 453 454 455 456 457 458 459 460 461 462

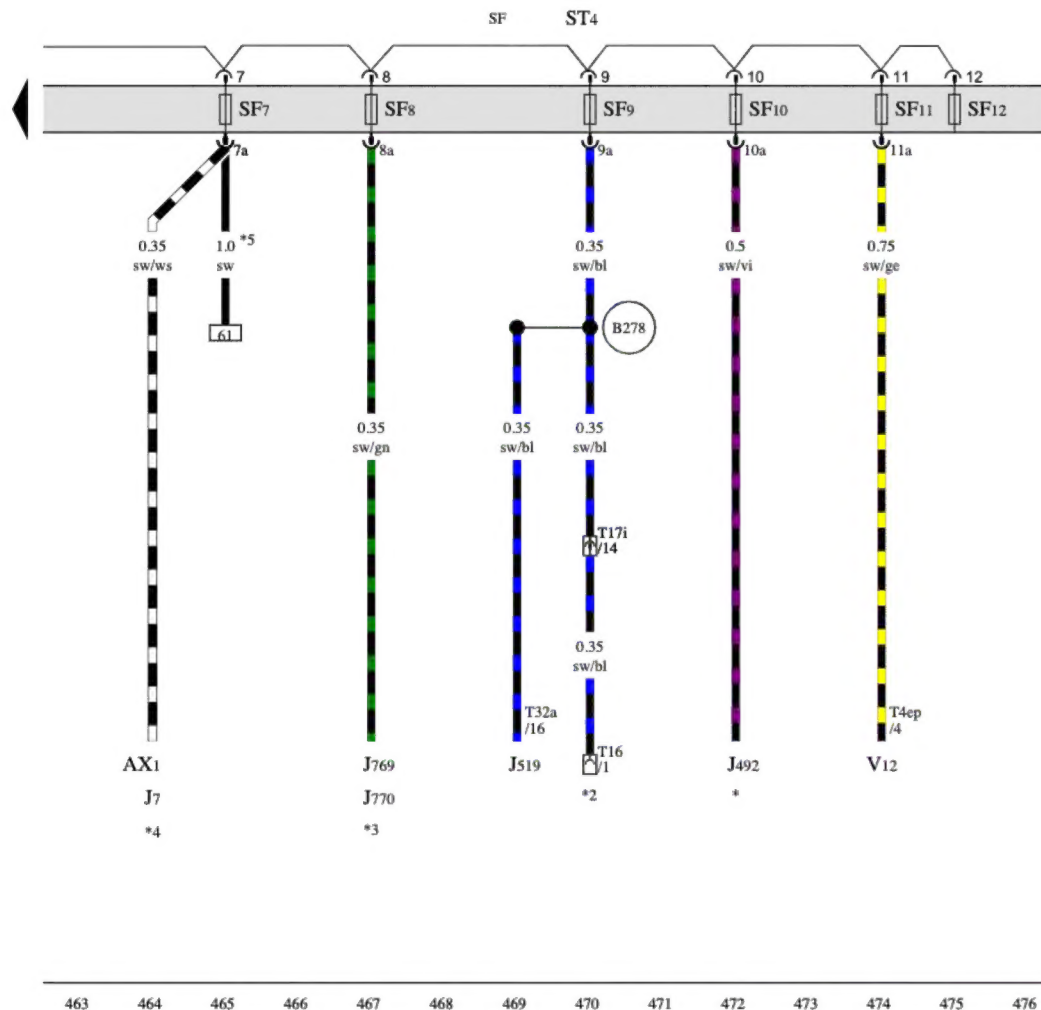

Fuse Panel F, Fuse Panel 4

- | | |
|------|---|
| AX1 | Hybrid Battery Unit |
| J7 | Battery Cut-Off Relay |
| J492 | All-Wheel Drive Control Module |
| J519 | Vehicle Electrical System Control Module |
| J769 | Lane Change Assistance Control Module |
| J770 | Lane Change Assistance Control Module 2 |
| SF | Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right |
| ST4 | Fuse Panel 4, Green |
| SF7 | Fuse 7 (On Fuse Panel F) |
| SF8 | Fuse 8 (On Fuse Panel F) |
| SF9 | Fuse 9 (On Fuse Panel F) |
| SF10 | Fuse 10 (On Fuse Panel F) |
| SF11 | Fuse 11 (On Fuse Panel F) |
| SF12 | Fuse 12 (On Fuse Panel F) |
| T4ep | 4-Pin Connector |
| T16 | 16-Pin Connector |
| T17i | 17-Pin Connector, In the Left A-Pillar Connector Station |
| T32a | 32-Pin Connector |
| V12 | Rear Window Wiper Motor |

B278 Positive Connection 2 (15a) (in Main Wiring Harness)

- * For AWD Vehicles
- *2 Diagnostic Connector
- *3 Refer to Applicable Lane Change Assistance Wiring Diagram
- *4 For Vehicles with Hybrid Drive
- *5 Diameter Depends on Equipment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Fuse Panel F, Fuse Panel 5

- J9 Rear Window Defogger Relay
- J17 Fuel Pump Relay
- J403 Level Control System Compressor Relay
- J492 All-Wheel Drive Control Module
- J880 Reducing Agent Metering System Control Module
- J963 Reducing Agent Metering System Relay
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- SF2 Fuse 2 (On Fuse Panel F)
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- ST5 Fuse Panel 5, Black
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- T47a 47-Pin Connector

B301 Positive Connection 5 (30) (in Main Wiring Harness)

- * For AWD Vehicles
- *2 Refer to Applicable Standard Equipment Wiring Diagram
- *3 For Vehicles with Level Control System
- *4 Refer to Applicable Wiring Diagram
- *5 Refer to Applicable Engine Wiring Diagram
- *6 For Vehicles with 400 W Voltage Stabilizer
- *7 Depending on Equipment

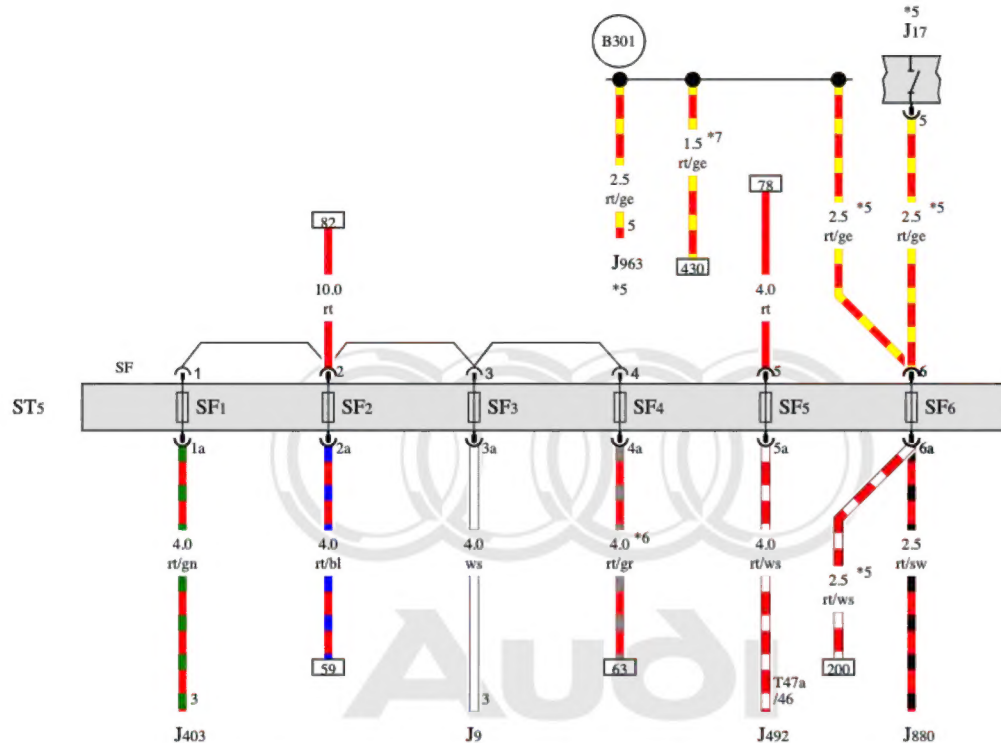

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink